


SK1750

Yanmar® 3TNV86C

Operator's Manual

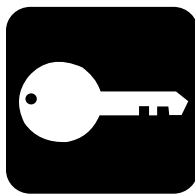

Overview

Chapter Contents

Serial Number Location 2

Intended Use 3

Equipment Modification 3

Machine Components 4


Operator Orientation 5

Operating Area 5

About This Manual 6


- Bulleted Lists 6
- Numbered Lists 6

California Proposition 65

 **WARNING** Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm. www.P65warnings.ca.gov.

Serial Number Location

Record serial number and date of purchase in spaces provided. Serial number is located as shown.

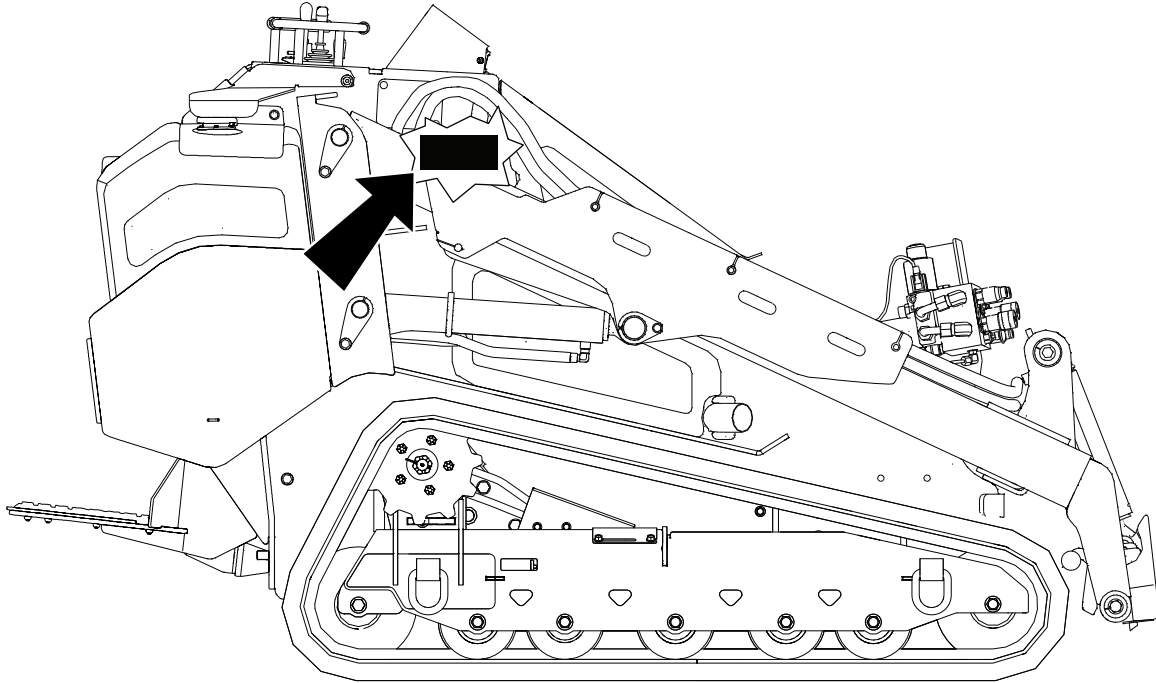

t55om001w.eps

Item	
Date of manufacture	
Date of purchase	
Machine serial number	

Intended Use

The SK1750 is a platform, rubber track compact tool carrier machine designed for medium-duty construction work by rental, professional, and commercial operators. The machine has a quick attach plate which makes it easy for an operator to connect different attachments.


This machine is intended for operation only according to the instructions in this manual. Operate machine in ambient temperatures from -12° to 46°C (10° to 115°F). Contact your Ditch Witch® dealer for provisions required for operating in extreme temperatures. Use in any other way is considered contrary to the intended use.

This machine should be operated, serviced, and repaired only by professionals familiar with its particular characteristics and acquainted with the relevant safety procedures.

Equipment Modification

This equipment was designed and built in accordance with applicable standards and regulations. Modification of equipment could mean that it will no longer meet regulations and may not function properly or in accordance with the operating instructions. Modification of equipment should only be made by competent personnel possessing knowledge of applicable standards, regulations, equipment design functionality/requirements and any required specialized training.

Machine Components

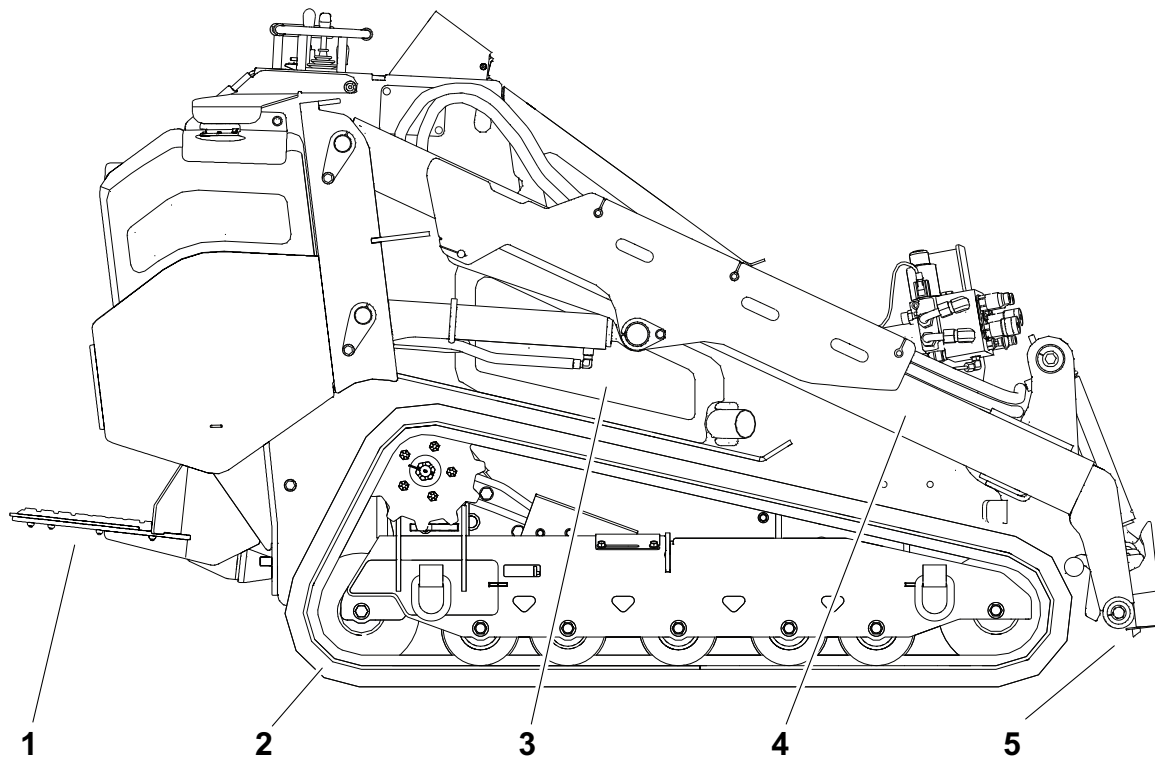


t55om001w.eps

- | | |
|------------------------------|---------------------|
| 1. Operator station platform | 4. Lift arms |
| 2. Tracks | 5. Attachment plate |
| 3. Engine compartment | |

Operator Orientation

IMPORTANT: Top view of machine is shown.

1. Front
2. Right side
3. Rear
4. Left side

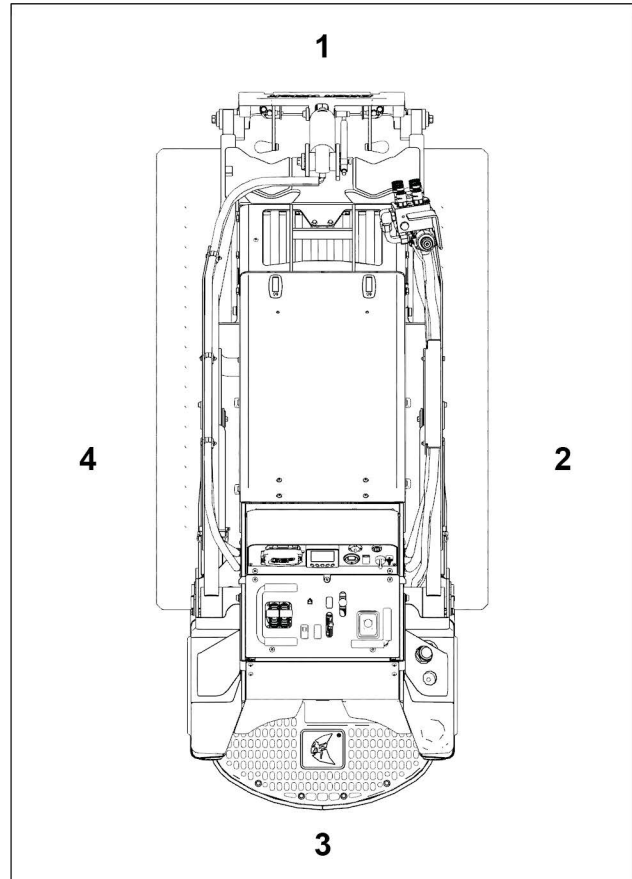


t55om003w.png

Operating Area

IMPORTANT: Top view of machine is shown.

Operator should stand only in the location shown.

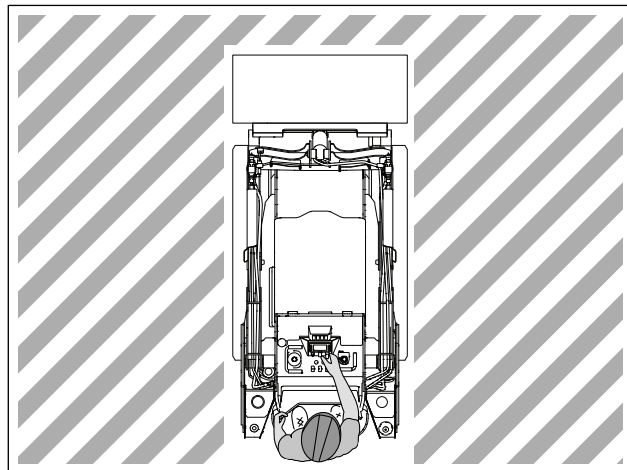

t62om004w19.eps

About This Manual

This manual contains information for the proper use of this machine. Cross references such as “See page 50” will direct you to detailed procedures.

Bulleted Lists

Bulleted lists provide helpful or important information or contain procedures that do not have to be performed in a specific order.

Numbered Lists

Numbered lists contain illustration callouts or list steps that must be performed in order.

Foreword

This manual is an important part of your equipment. It provides safety information and operation instructions to help maintain your Ditch Witch® equipment.

Read this manual before using your equipment. Keep it with the equipment at all times for future reference. If you sell your equipment, be sure to give this manual to the new owner.

If you need a replacement copy, contact your Ditch Witch dealer. If you need assistance in locating a dealer, visit our website at www.ditchwitch.com or write to the following address:

The Charles Machine Works, Inc.
ATTN: Marketing Department
PO Box 66
Perry, OK 73077-0066
USA

The descriptions and specifications in this manual are subject to change without notice. The Charles Machine Works, Inc. reserves the right to improve equipment. Some product improvements may have taken place after this manual was published. For the latest information on Ditch Witch equipment, see your Ditch Witch dealer.

Thank you for buying and using Ditch Witch equipment.

**SK1750
Operator's Manual**

Yanmar® 3TNV86CT-DD2

Issue number 2.1/OM-04/25

Part number 053-10054

**Copyright 2023, 2025
by The Charles Machine Works, Inc.**



and Ditch Witch are registered trademarks of The Charles Machine Works, Inc. Other trademarks and trade names are those of their respective owners.

This product and its use may be covered by one or more patents at <http://patents.charlesmachine.works>.

Contents

Overview 1

Machine serial number, information about the type of work this machine is designed to perform, basic machine components, and how to use this manual

Foreword 7

Part number, revision level, and publication date of this manual, and factory contact information

Safety Awareness 11

Machine safety alerts and emergency procedures

Prepare 19

Procedures for preparing jobsite, preparing operator, and preparing equipment

Controls 31

Machine controls, gauges, and indicators and how to use them

Drive 45

Procedures for startup, cold start, driving, and shutdown

Transport 51

Procedures for lifting, hauling, and retrieving

Complete the Job 59

Procedures for restoring the jobsite and rinsing and storing equipment

Maintenance 63

Service intervals and instructions for this machine including lubrication, replacement of wear items, and basic maintenance

Specifications 89

Machine specifications including weights, measurements, power ratings, and fluid capacities


Support

95

The warranty policy for this machine and procedures for obtaining warranty consideration and training

Safety

Chapter Contents



For additional precautions, see “Prepare” chapter.

Safety Alert Classification 12

Guidelines 13

Emergency Procedures 14

- Electric Strike Description 14
- If an Electric Line is Damaged 15
- If a Gas Line is Damaged 15
- If a Fiber Optic Cable is Damaged 16
- If Machine Catches on Fire 16

Machine Safety Alerts 17

Safety Alert Classifications

These classifications and the icons defined on the following pages work together to alert you to situations which could be harmful to you, jobsite bystanders or your equipment. When you see these words and icons in the book or on the machine, carefully read and follow all instructions. YOUR SAFETY IS AT STAKE.

Watch for the three safety alert levels: **DANGER**, **WARNING** and **CAUTION**. Learn what each level means.



indicates a hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.



indicates a hazardous situation that, if not avoided, could result in death or serious injury.




indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

Watch for two other words: **NOTICE** and **IMPORTANT**.


NOTICE indicates information considered important, but not hazard-related (e.g., messages relating to property damage).

IMPORTANT can help you do a better job or make your job easier in some way.

Guidelines

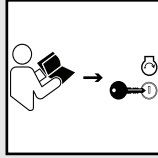**⚠ WARNING**

Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

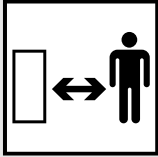**⚠ WARNING**

Raised component. Crushing can cause death or serious injury. Stay away. Use correct equipment and procedures.

Follow these guidelines before operating any jobsite equipment:

- Complete proper training.
- Read and understand operator's manual before using equipment.
- Wear personal protective equipment including long pants, hard hat, eye protection, hearing protection, and protective footwear.
- Do not wear jewelry or loose clothing.
- Mark proposed path with white paint and have underground utilities located before working. In the US or Canada, call 811 (US) or 888-258-0808 (US and Canada). Also contact any local utilities that do not participate in the One-Call service. In countries that do not have a One-Call service, contact all local utility companies to have underground utilities located.
- Classify jobsite based on its hazards and use correct tools and machinery, safety equipment, and work methods for jobsite.
- Mark jobsite clearly and keep spectators away.
- Review jobsite hazards, safety and emergency procedures, and individual responsibilities with all personnel before work begins. Safety videos are available from your Ditch Witch dealer or at www.ditchwitch.com/safety. Safety Data Sheets (SDS) are available at www.ditchwitch.com/support.
- Ensure jobsite is adequately lit. Arrange for secondary light sources as needed.
- Complete the equipment checklist located at www.ditchwitch.com/safety.
- Fully inspect equipment before operating. Repair or replace any worn or damaged parts. Replace missing or damaged safety shields and safety alert signs. Contact your Ditch Witch dealer for assistance.
- Follow instructions on all safety alert signs on machine.
- Keep access steps and platforms clean and free of obstacles and debris.
- Use equipment carefully per the instructions in this manual. Stop operation and investigate anything that does not look or feel right.
- Do not operate machine where flammable gas may be present.

- Only operate equipment in well ventilated areas.
- Always tie down equipment and properly stow accessories, even if traveling short distances.
- Contact your Ditch Witch dealer if you have any questions about operation, maintenance, or equipment use.

Emergency Procedures



⚠ WARNING Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

Before operating any equipment, review emergency procedures and check that all safety precautions have been taken.

EMERGENCY SHUTDOWN: Shut off machine or press remote engine stop button or emergency stop button (if equipped).

Electric Strike Description

When working near electric cables, remember the following:

- Electricity follows all paths to ground, not just path of least resistance.
- Pipes, hoses, and cables will conduct electricity back to all equipment.
- Low voltage current can injure or kill. Many work-related electrocutions result from contact with less than 440 volts.

Most electric strikes are not noticeable, but indications of a strike include:

- power outage
- smoke
- explosion
- popping noises
- arcing electricity

If any of these occur, assume an electric strike has occurred.

If an Electric Line is Damaged

If you suspect an electric line has been damaged, DO NOT MOVE. Take the following actions. The order and degree of action will depend on the situation.

- If you are **on the machine**, REMAIN ON MACHINE. Raise attachments and drive from immediate area.
- If you are **off the machine**,
 - DO NOT TOUCH ANY EQUIPMENT.
 - If you must leave the area, take small steps with feet close together to reduce the hazard of being shocked from one foot to the other.
- Warn people nearby that an electric strike has occurred. Instruct them to leave the area.
- Have someone contact electric company to shut off power.
- If you leave the area, do not return to jobsite or allow anyone into area until given permission by utility company.

If a Gas Line is Damaged

If you suspect a gas line has been damaged, take the following actions. The order and degree of action will depend on the situation.

- Immediately shut off engine(s), if this can be done safely and quickly.
- Remove any ignition source(s), if this can be done safely and quickly.
- Warn others that a gas line has been cut and that they should leave the area.
- After warning others to leave the area, leave jobsite as quickly as possible.
- Immediately call your local emergency phone number and utility company.
- If jobsite is along street, stop traffic from driving near jobsite.
- Do not return to jobsite until given permission by emergency personnel and utility company.

If a Fiber Optic Cable is Damaged


Do not look into cut ends of fiber optic or unidentified cable. Vision damage can occur. Contact utility company.

If Machine Catches on Fire

Perform emergency shutdown procedure and then take the following actions. The order and degree of action will depend on the situation.


- Immediately move battery disconnect switch (if equipped and accessible) to disconnect position.
- If fire is small and fire extinguisher is available, attempt to extinguish fire.
- If fire cannot be extinguished, leave area as quickly as possible and contact emergency personnel.

Machine Safety Alerts

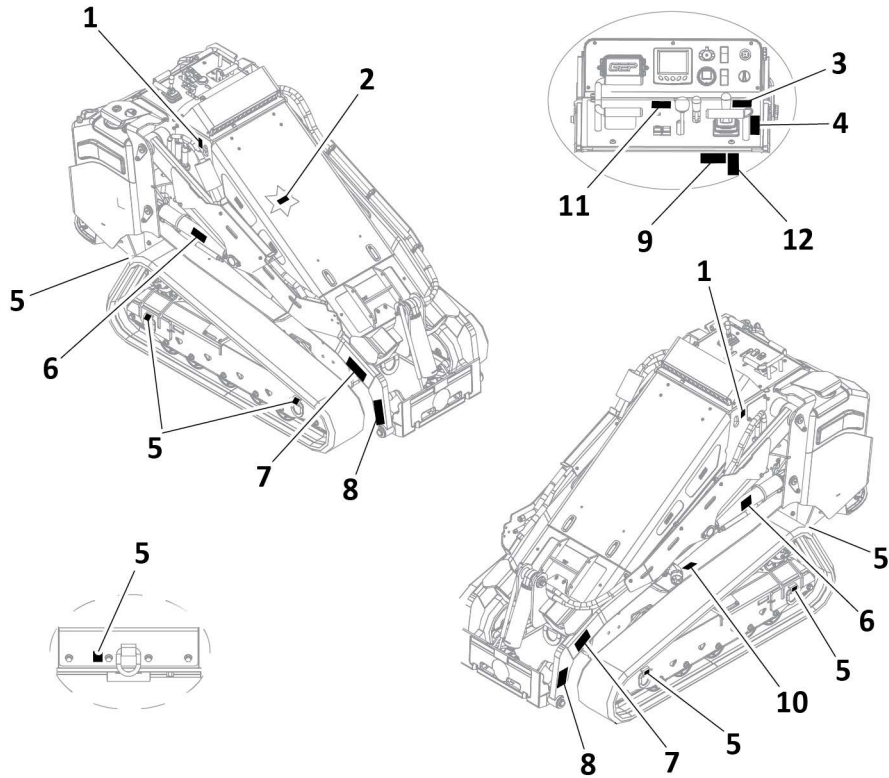


Decal_SK1750.png

1

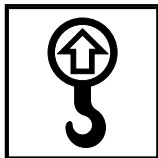

Lift point. See Transport chapter for more information.

2

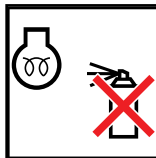

WARNING Pre-heater. Fire or explosion can cause death or serious injury. Never use starter fluid.

3




WARNING Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

4




CAUTION High noise levels. Exposure can cause hearing loss. Wear hearing protection.

5

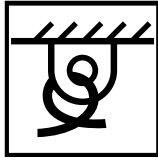


Tiedown location. See Transport chapter for more information.

6

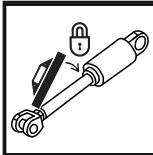


! WARNING Raised component. Crushing can cause death or serious injury. Stay away or secure raised component with locking device. Use correct equipment and procedures.

7

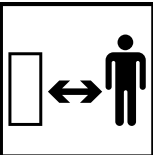


! WARNING Lifted load. Crushing can cause death or serious injury. Stay away from lifted load and its range of movement.

8

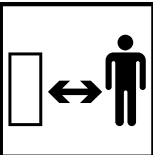


! WARNING Moving parts. Contact can cause serious injury. Stay away.

9

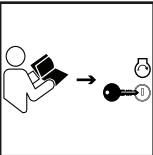



! WARNING Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

10

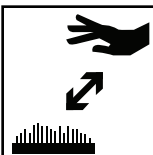

! CAUTION Hot parts. Contact can cause burns. Only touch when cool or wear gloves.


11

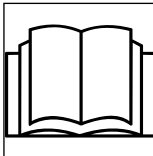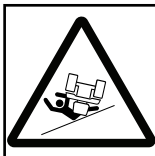

! WARNING Tipover. Crushing can cause death or serious injury. Follow procedure in operator's manual. Drive cautiously.

Prepare

Chapter Contents

	See “Safety” for additional precautions. Wear proper personal protective equipment.
---	--

Prepare Jobsite 20

- Review Job Plan 20
- Select Start and End Points 20
- Identify Hazards 21
- Locate Utilities 22
- Classify Jobsite 23
- Arrange for Traffic Control 24

Prepare Operator 25

Prepare Equipment 26

- Check Supplies 26
- Check Equipment 26
- Assemble Accessories 27
- Connect Attachment 28

Prepare Jobsite



⚠ WARNING

Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

To help avoid injury:

- Expose lines by careful hand digging or soft excavation before operating equipment. Use appropriate equipment and procedures for exposing utility lines.
- Classify jobsite and follow precautions based on classification.
- Follow local regulations for digging near utilities.

A successful job begins before working. The first step in planning is reviewing information already available about the job and jobsite.

Review Job Plan

Review blueprints or other plans. Check for information about existing or planned structures, elevations, or proposed work that may be taking place at the same time.

Select Start and End Points

Select one end to use as a starting point. Consider the following when selecting a starting point:

Slope

Equipment should be parked on a level site. Consider how slope will affect setup and operation. Assess the risks on each slope to determine if factors affecting risks create an unsafe condition for working. See “Slope Guidelines” on page 48.

Space

Check that starting and ending points allow enough space for working.

Comfort

Consider shade, wind, fumes, and other site features.

Identify Hazards

Inspect jobsite before transporting equipment. Check for the following:

- overall grade or slope
- changes in elevation such as hills or open trenches
- obstacles such as buildings, railroad crossings, or streams
- signs of utilities
 - “buried utility” notices
 - gas or water meters
 - drop boxes
 - manhole covers
 - utility facilities without overhead lines
 - junction boxes
 - light poles
 - sunken ground
- traffic
- access
- soil type and condition
- loose material such as fencing or cable

Identify safety hazards and classify jobsite if attachment will penetrate ground. See “Classify Jobsite” on page 23.

Locate Utilities

Notify One-Call Services


Mark proposed path with white paint and have underground utilities located before working.

- In the US or Canada, call 811 (US) or 888-258-0808 (US and Canada). Also contact any local utilities that do not participate in the One-Call service.
- In countries that do not have a One-Call service, contact all local utility companies to have underground utilities located.

Verify Underground Utilities

Have an experienced locating equipment operator sweep area within 20' (6 m) to each side of proposed excavation to verify previously marked line and cable locations. Mark location of all buried utilities and obstructions.

Locate Overhead Lines

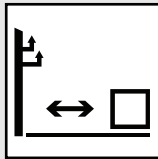

DANGER Overhead electrical lines. Contact will cause death or serious injury. Know location of lines. Stay away.

Note location and height of all overhead lines in jobsite and ensure that equipment maintains proper distance from live lines.

Classify Jobsite



Select a Classification

Jobsites are classified according to underground hazards present, not by line being installed. Jobsite may have more than one classification.

If working . . .	then classify jobsite as . . .
within 10' (3m) of a buried electric line	electric
within 10' (3m) of a natural gas line	natural gas
in concrete, sand, or granite which is capable of producing crystalline silica dust	crystalline silica dust
within 10' (3m) of any other hazard	other

Classify jobsite as electric if jobsite is in question or if the possibility of unmarked electric utilities exists.

Apply Precautions



⚠ WARNING Underground utilities. Contact can cause death or serious injury. Locate and verify underground utilities before digging or drilling.

Once classified, precautions appropriate for jobsite must be taken. Follow US Department of Labor regulations on excavating and trenching (Part 1926, Subpart P) and other similar regulations.

Electric Jobsite Precautions


Use one or both of these methods:

- Expose line by careful hand digging or soft excavation.
- Have service shut down while work is in progress. Have electric company test lines before returning them to service.

Natural Gas Jobsite Precautions

Position equipment upwind from gas lines and use one or both of these methods:

- Expose line by careful hand digging or soft excavation.
- Have service shut down while work is in progress. Have gas company test lines before returning them to service.

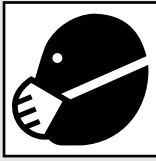Crystalline Dust Jobsite Precautions**⚠ WARNING**

Silica dust. Exposure can cause lung disease or cancer. Use breathing protection.

Crystalline silica dust is a naturally occurring substance found in soil, sand, concrete, granite, and quartz.

To reduce exposure when cutting, drilling, or working these materials:

- Use water spray or other means to control dust.
- Refer to US Occupational Safety and Health Administration (OSHA) guidelines or other applicable regulating guidelines for appropriate breathing protection or dust control methods.

Other Jobsite Precautions


You may need to use different methods to safely avoid other underground hazards. Talk with those knowledgeable about hazards present at each site to determine which precautions should be taken or if job should be attempted.

Clear objects such as landscaping fabric, cable, and wire from the work area. These objects may be underground or partially buried.

Arrange for Traffic Control

Vehicle and pedestrian traffic must be a safe distance from equipment. Evaluate jobsite and allow an appropriate buffer zone around equipment. If working near a road or other traffic area, contact local authorities about safety procedures and regulations.

Prepare Operator

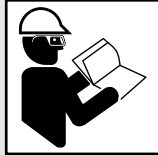**⚠ WARNING**

Jobsite hazards. Exposure can cause death or serious injury. Use correct equipment and work methods. Use and maintain appropriate safety equipment.

To help avoid injury:

- Wear personal protective equipment including hard hat, safety eye wear, foot protection, hearing protection, and gloves (except when near rotating equipment).
- Remove jewelry.
- Wear close-fitting, high visibility clothing.
- Have other personal protective equipment, such as insulated boots and gloves, breathing protection, and face shield, etc. available for use depending on jobsite hazards or requirements.

Follow these guidelines before operating any jobsite equipment:

- Complete proper training and read operator's manual before using equipment.
- Plan for emergency services. Have the telephone numbers for local emergency and medical facilities on hand. Check that you will have access to a telephone.
- Review jobsite hazards, safety and emergency procedures, and individual responsibilities with all personnel before work begins. Safety videos are available from your Ditch Witch® dealer or at www.ditchwitch.com/safe. Safety Data Sheets (SDS) are available at www.ditchwitch.com/support.
- Use equipment carefully. Stop operation and investigate anything that does not look or feel right.

Prepare Equipment

Check Supplies

- fuel
- diesel exhaust fluid (DEF), if needed
- marking flags or paint
- notepad and pencil
- spare fuses
- lubricants


Check Equipment

Fluid Levels

- fuel
- engine oil
- diesel exhaust fluid (DEF), if needed
- hydraulic fluid
- engine coolant

Condition and Function

- all controls

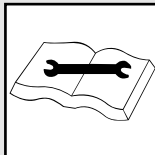


⚠ WARNING Improper control function. Use can cause death or serious injury. If control does not work as described in instructions, stop machine and have it serviced.

- battery
- hoses and valves
- pumps and motors
- tires or tracks
- signs, guards, and shields
- filters (air, oil, hydraulic, fuel)
- belts

Assemble Accessories

If required, mount fire extinguisher near the power unit but away from possible points of ignition. The fire extinguisher should always be classified for both oil and electric fires. It should meet legal and regulatory requirements.

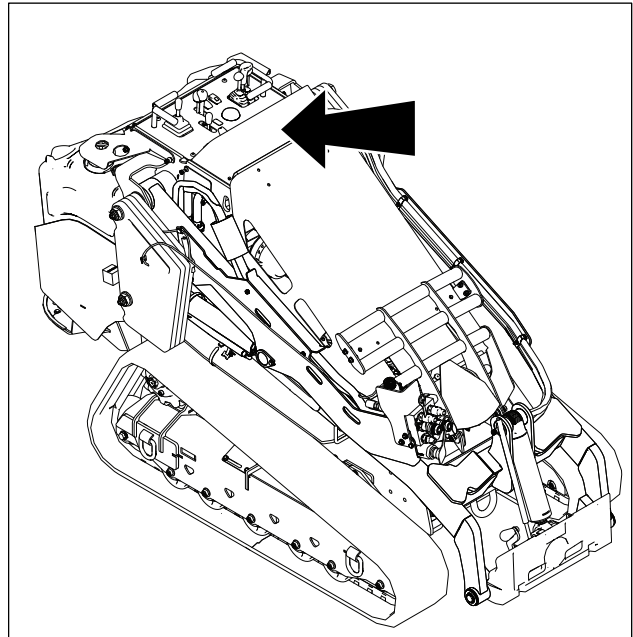


t69om001w25.eps

Connect Attachment


NOTICE: Use only Ditch Witch-approved attachments. Attachments can change the stability and operating characteristics of the machine. See attachment operation manual for instructions regarding proper operation of attachments.

IMPORTANT: Before connecting attachment to machine, ensure that attachment and receiver plates are free of dirt and debris.

1. Position attachment on level surface with enough space behind it to accommodate machine.
2. Start engine.

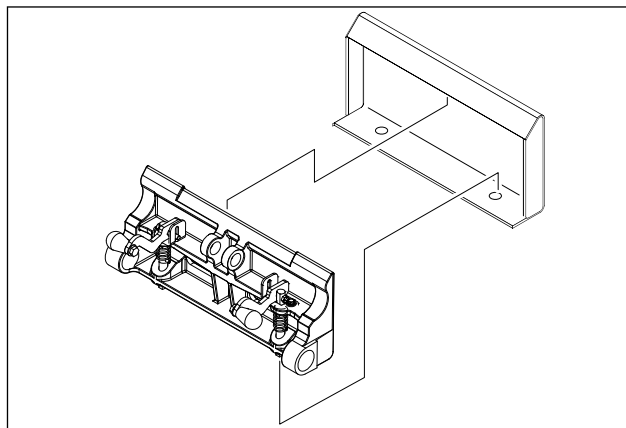


3. Tilt attachment plate (2) forward.
4. Position attachment plate in upper lip of receiver plate (1) on attachment.
5. Raise lift arms while tilting back attachment plate to engage pins.

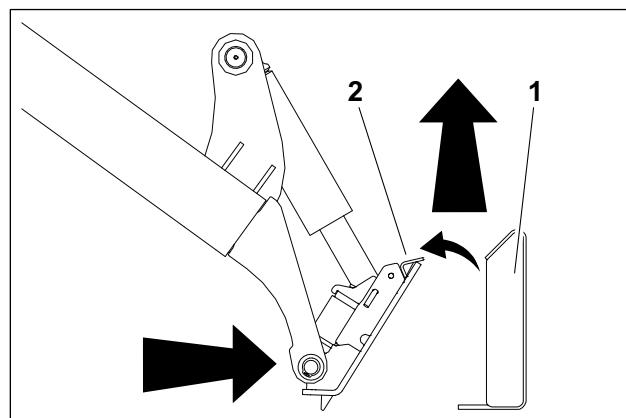

t62om006w19.eps

6. Ensure pins (shown) are engaged by rotating attachment down.

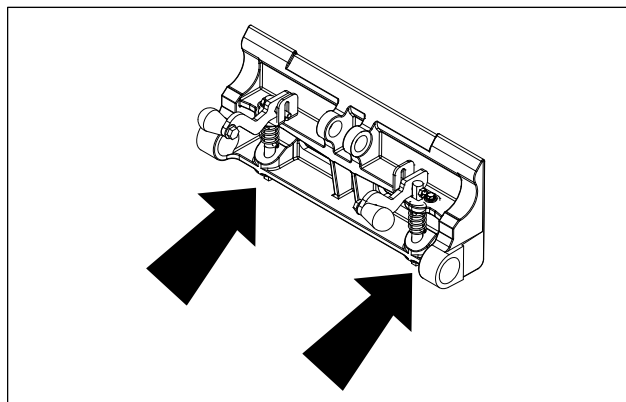

t43om007w.eps

Hydraulic Connection

If attachment requires hydraulic power for operation, connect hydraulic hoses.



⚠ WARNING Pressurized fluid or air. Injection can cause death or serious injury. Refer to operator's manual for correct use.

To help avoid injury:


- Use a piece of cardboard or wood, rather than hands, to check for leaks.
- Before disconnecting a hydraulic line, turn engine off and operate all controls to relieve pressure.
- Lower, block, or support any raised component with a hoist.
- Cover connection with heavy cloth and loosen connector nut slightly to relieve residual pressure. Catch all fluid in a container.
- Before using system, check that all connections are tight and all lines are undamaged.
- If you are injured, seek immediate medical attention from a doctor familiar with this type of injury.



⚠ CAUTION Hot parts. Contact can cause burns. Only touch when cool or wear gloves.

IMPORTANT: Right side is medium flow and left side is high/low flow.


1. Ensure machine is shut off.
2. Activate accessories using ignition switch.
3. Operate auxiliary controls to relieve residual pressure at hydraulic couplers.
4. Remove dirt and debris from hydraulic couplers.
5. Connect male coupler from attachment to female coupler (3) on machine.
6. Connect female coupler from attachment to male coupler (1) on machine.
7. If needed, connect attachment case drain hose to case drain connector (2).
8. Ensure that connections are secure by pulling on hoses.

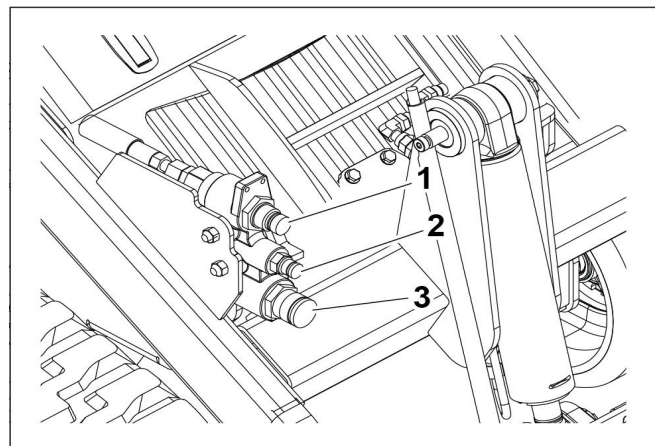

t55om008w.eps

Dual Auxiliary Circuit

1. Ensure machine is shut off.
2. Activate accessories using ignition switch.
3. Operate auxiliary controls to relieve residual pressure at hydraulic couplers.
4. Remove dirt and debris from hydraulic couplers.
5. Pull knob (6) to relieve residual pressure in manifold.
6. Connect male coupler from attachment to female coupler (2) on machine.
7. Connect female coupler from attachment to male coupler (1) on machine.
8. If needed, connect attachment case drain hose to case drain connector (3).
9. For attachments that have a secondary function, connect those hoses to the secondary circuit (4, 5).
10. Ensure that connections are secure by pulling on hoses.
11. Select secondary auxiliary circuit. See "Auxiliary circuit switch" on page 44.

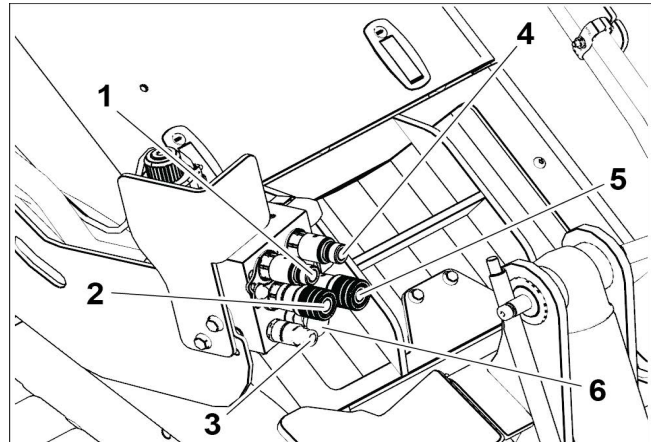

t55om009w.png

Primary circuit: connectors 1 & 2

Secondary circuit: connectors 4 & 5

Controls

Chapter Contents

Attachment Plate 32

Battery Disconnect 33


Display 34

Gauges and Indicators 39

Miscellaneous 40

Operator Station 40


Attachment Plate

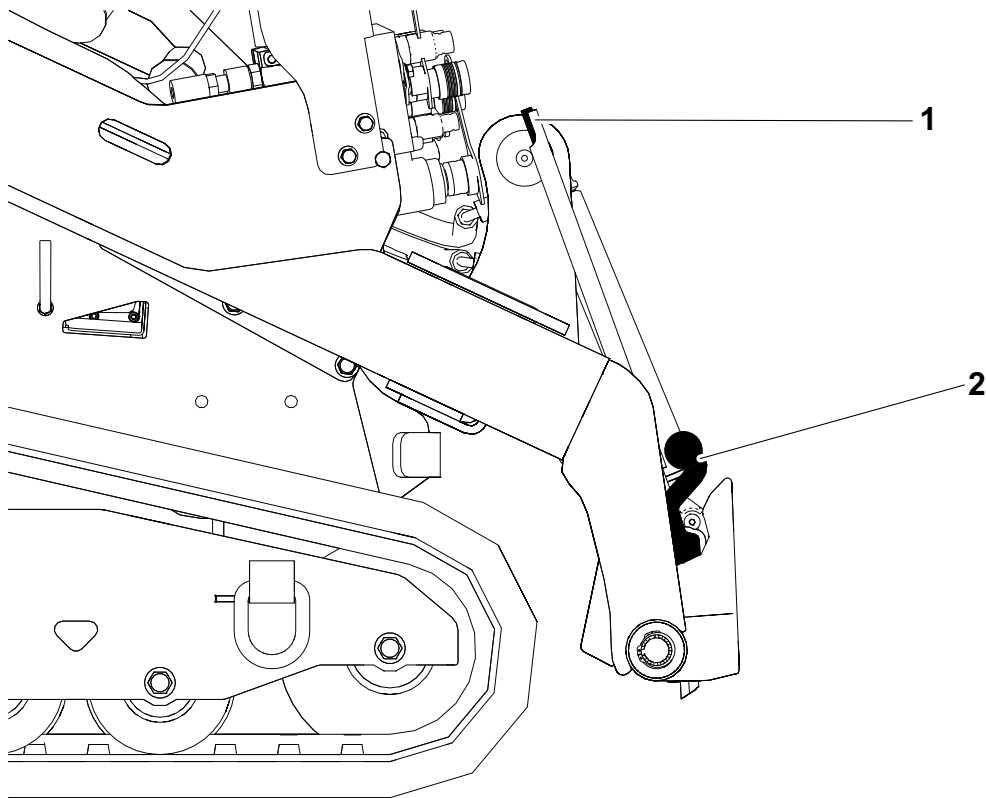


t69om003w23.eps

Item	Description	IMPORTANT
1. Level indicator	To level bucket, adjust until indicator is at top of sleeve.	To level other attachments, adjust until level and mark indicator position on sleeve. Use mark to indicate level with that attachment.
2. Attachment latch	To lock attachment, move latch down. To unlock, move latch up.	

Battery Disconnect

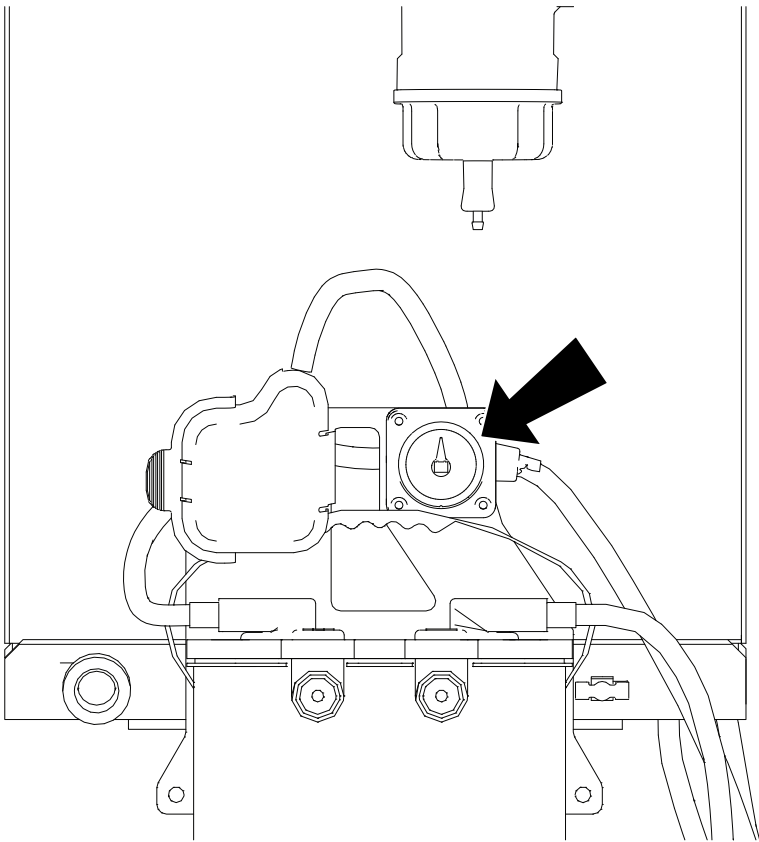


t53om034w20.eps

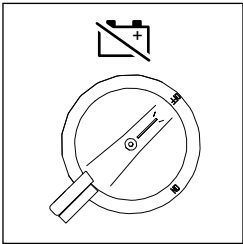Item	Description	IMPORTANT
<div>Battery disconnect switch</div> <div><p>c00ic156w.eps</p></div>	<div>To disconnect, move left.</div> <div>To connect, move right.</div>	<div>NOTICE:</div> <div><ul style="list-style-type: none">Do not disconnect with engine running.To avoid equipment damage, wait two minutes after turning engine off before disconnecting battery.</div>





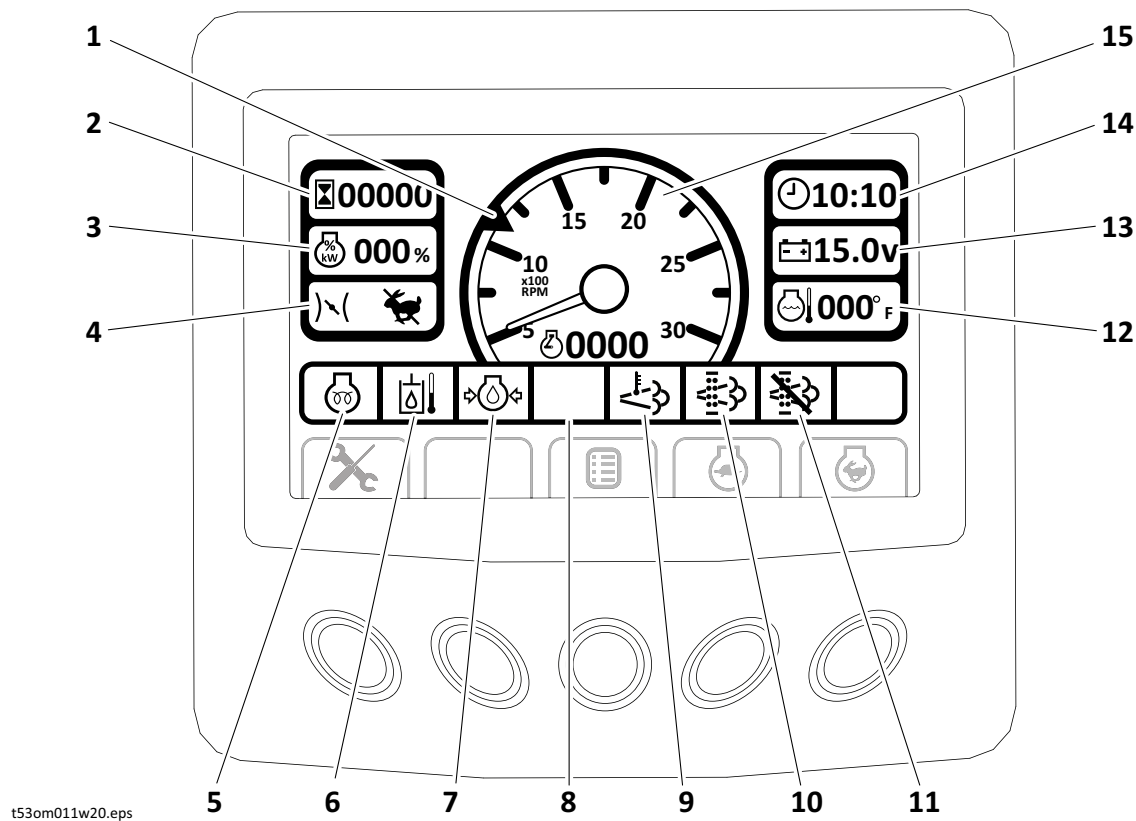









Display Version 2

Gauges and Indicators




- | | |
|--|---|
| 1. Tachometer setpoint indicator | 9. High exhaust temperature indicator |
| 2. Hourmeter | 10. Exhaust cleaning indicator |
| 3. Engine load gauge | 11. Exhaust cleaning disabled indicator |
| 4. Throttle mode indicator | 12. Engine coolant temperature gauge |
| 5. Glow plug indicator | 13. Voltmeter gauge |
| 6. Hydraulic fluid temperature indicator | 14. Real time clock |
| 7. Engine oil pressure indicator | 15. Tachometer |
| 8. Engine warning/stop indicator | |





Item	Description	IMPORTANT
1. Tachometer setpoint indicator	Indicates target engine speed.	Set by operator.

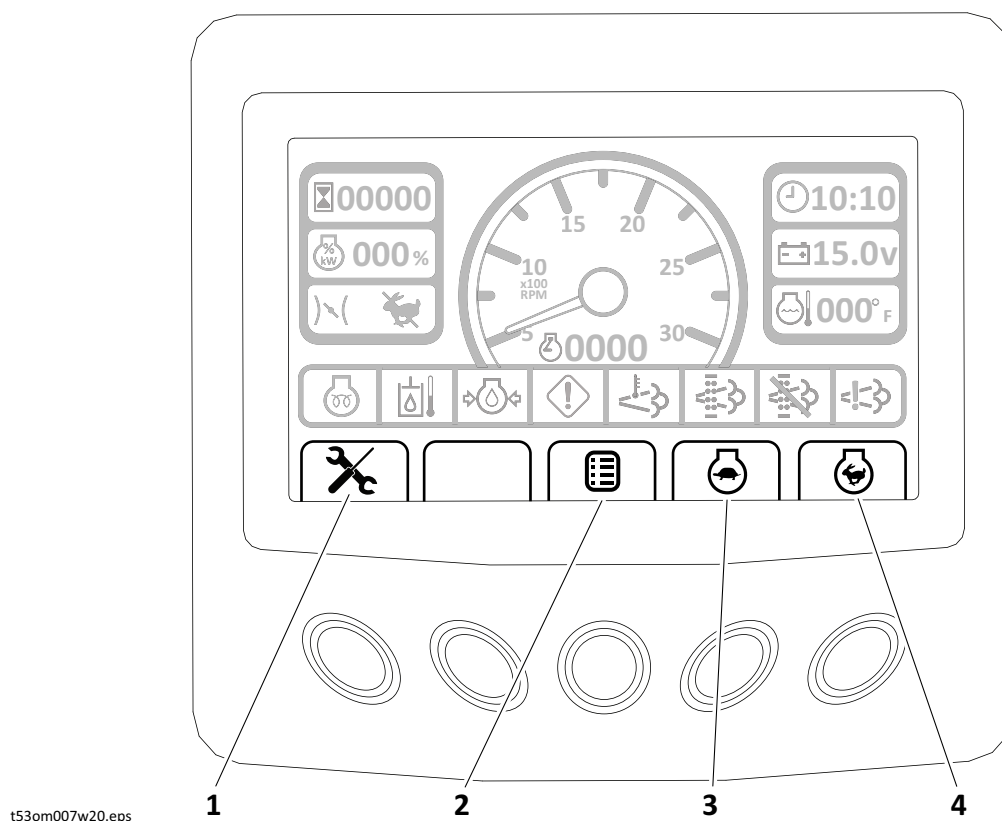Item	Description	IMPORTANT
2. Hourmeter	 Displays engine operating time.	Use these times to schedule service.
3. Engine load gauge	 Displays engine load.	
4. Throttle mode indicator	 Lights when throttle is inhibited.	Throttle has ten second delay when engine coolant temperature is below 0°F (38°C).
5. Glow plug indicator	 Lights when glow plugs are required to start machine.	See "Start" on page 46.
6. Hydraulic fluid temperature indicator	 Lights when hydraulic fluid temperature is too high.	
7. Engine oil pressure indicator	 Lights when engine oil pressure is too high.	
8. Engine warning/stop indicator	  Lights when engine needs attention. Lights when operator needs to stop engine.	
9. High exhaust temperature indicator	 Lights when exhaust temperature is high.	Will light during exhaust cleaning.
10. Exhaust cleaning indicator	 Lights when exhaust cleaning is needed.	
11. Exhaust cleaning disabled indicator	 Lights when operator has disabled exhaust cleaning.	NOTICE: Failure to complete an exhaust cleaning when required can cause engine damage.
12. Engine coolant temperature gauge	 Lights when engine coolant level is low.	
13. Voltmeter gauge	 Displays system voltage.	
14. Real time clock	 Displays time.	
15. Tachometer	Displays engine speed.	


Soft Keys





t53om007w20.eps



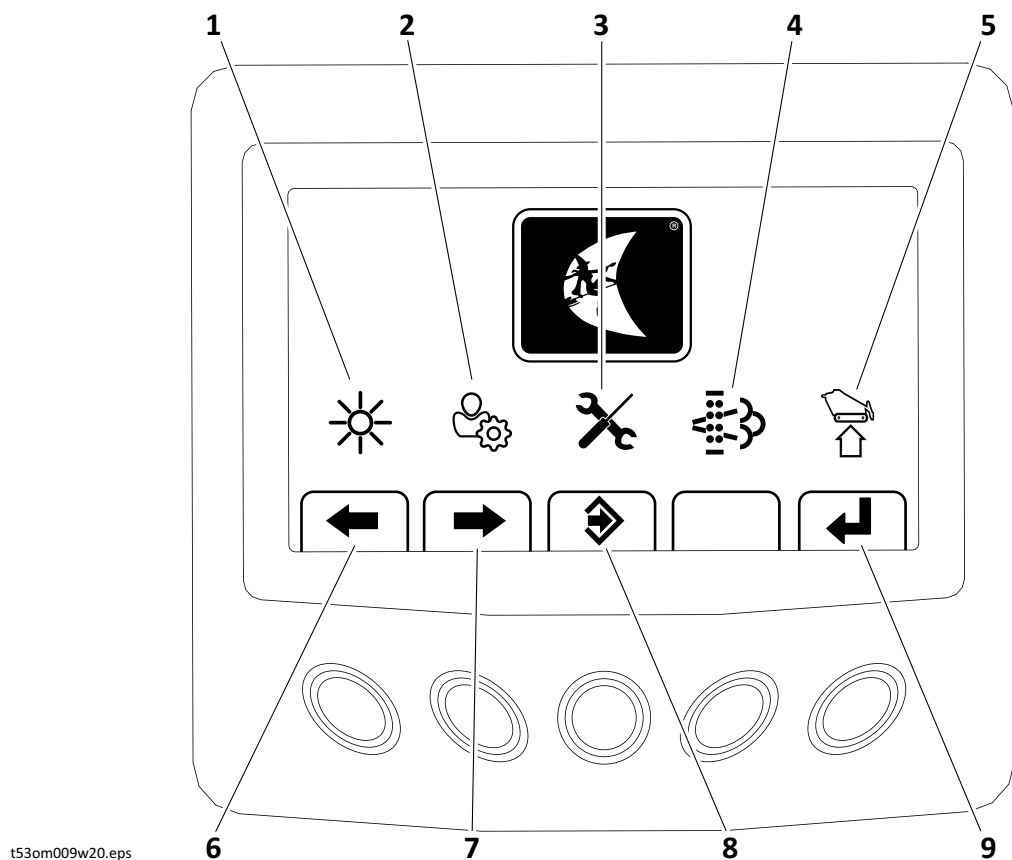




Item	Description	IMPORTANT
1. Hide/Recall key	 To hide/recall diagnostic or interlock message, press.	
2. Main menu key	 To select main menu, press.	
3. Throttle down control	 To decrease engine speed when in display throttle mode, press.	
4. Throttle up control	 To increase engine speed when in display throttle mode, press.	

Main Menu




- | | |
|------------------------------|---------------------------|
| 1. Brightness key | 6. Previous selection key |
| 2. User settings menu key | 7. Next selection key |
| 3. Diagnostics key | 8. Select key |
| 4. Exhaust cleaning menu key | 9. Return key |
| 5. Machine settings key | |

Item	Description	IMPORTANT
1. Brightness key	 To change brightness of display, press.	
2. User settings menu key	 To customize settings, press.	Language, real time clock, and units of measurement can be adjusted in this screen.

Item	Description	IMPORTANT
3. Diagnostics key	 To display engine and controller diagnostic codes, press.	For use only by qualified Ditch Witch technicians. If diagnostic codes are displayed, contact your Ditch Witch dealer.
4. Exhaust cleaning menu key	 To display exhaust cleaning information, press.	Parked cleanings can be initiated and automatic exhaust cleanings can be enabled/disabled in this screen.
5. Machine settings key	 To customize settings, press.	Throttle mode and ride control speed can be adjusted in this screen.
6. Previous selection key	 To scroll to previous menu selection, press.	
7. Next selection key	 To scroll to next menu selection, press.	
8. Select key	 To select menu, press.	
9. Return key	 To return to main screen, press.	


Gauges and Indicators

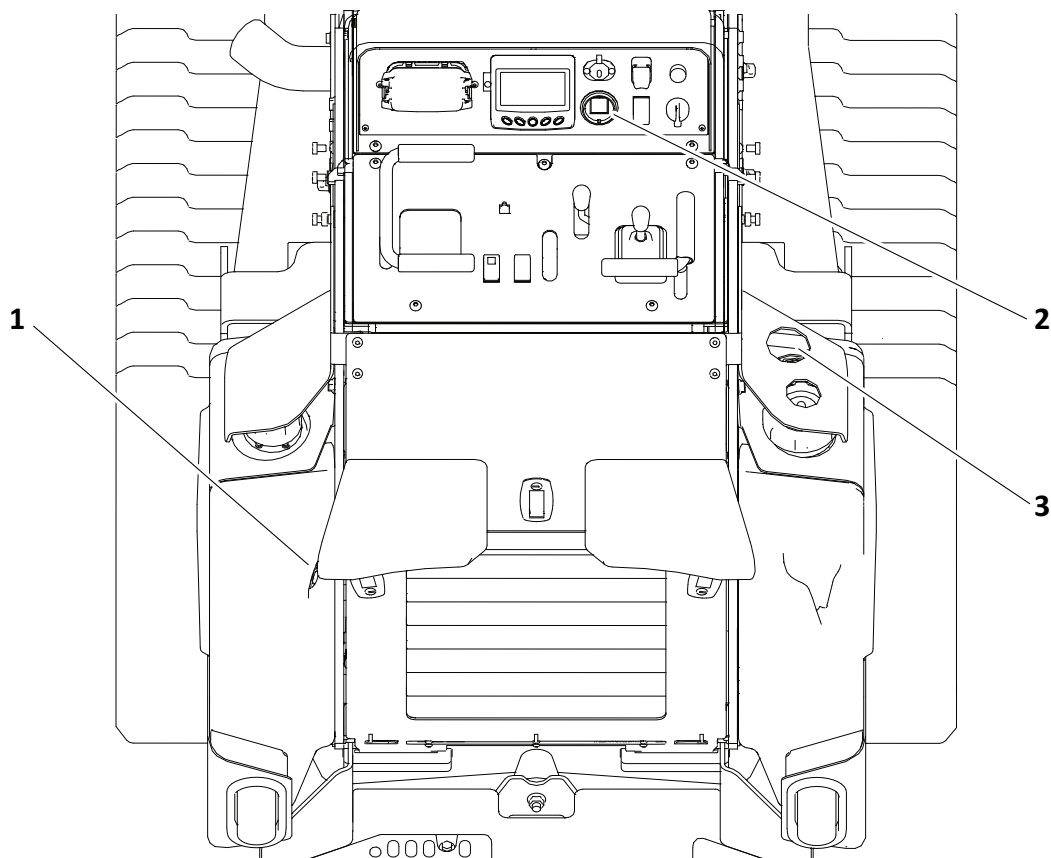

t53om035w20.eps

Item	Description	IMPORTANT
1. Hydraulic fluid level sight glass	Shows level of hydraulic fluid in tank.	
2. Air filter service indicator	Indicates condition of air filter.	See "Filter, Air" on page 78.
3. Fuel gauge	Displays level of fuel.	See "Approved Fuel" on page 69.


Miscellaneous

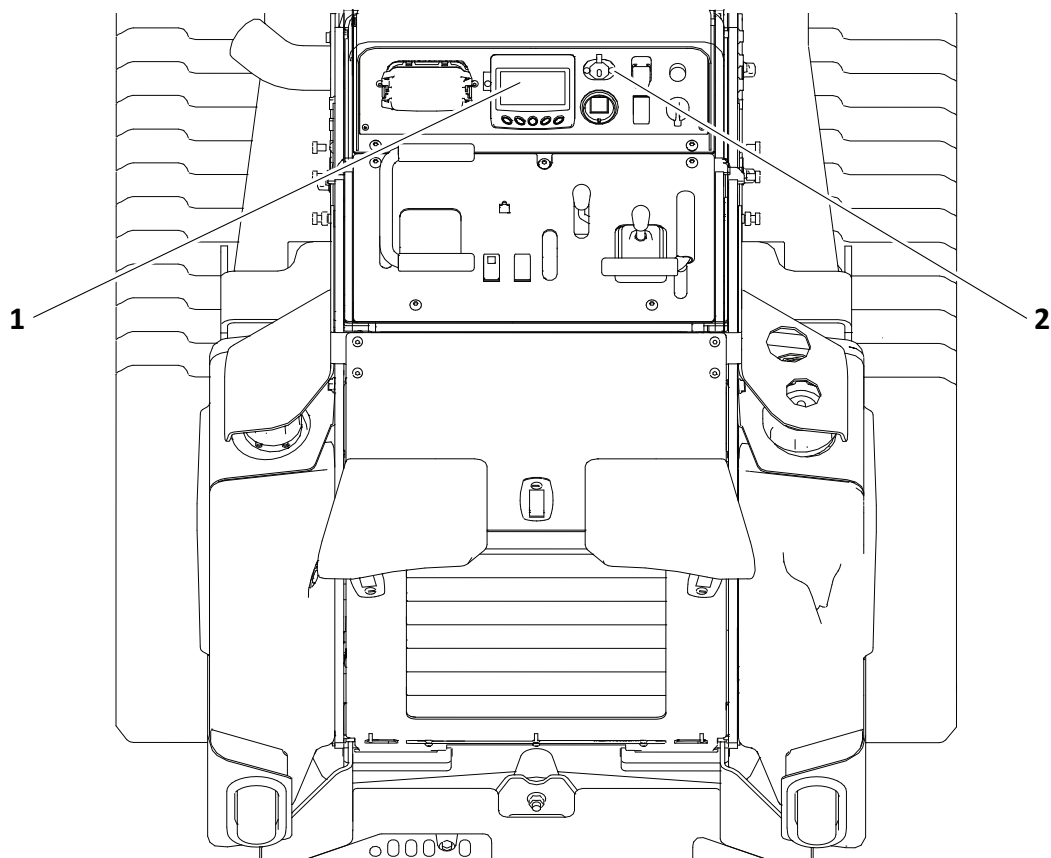

t53om001w20.eps

Item	Description	IMPORTANT
1. Graphic display	Displays graphic symbols for indicators and conditions.	
2. Auxiliary outlet	Provides power for other equipment.	12VDC, 5A





Operator Station




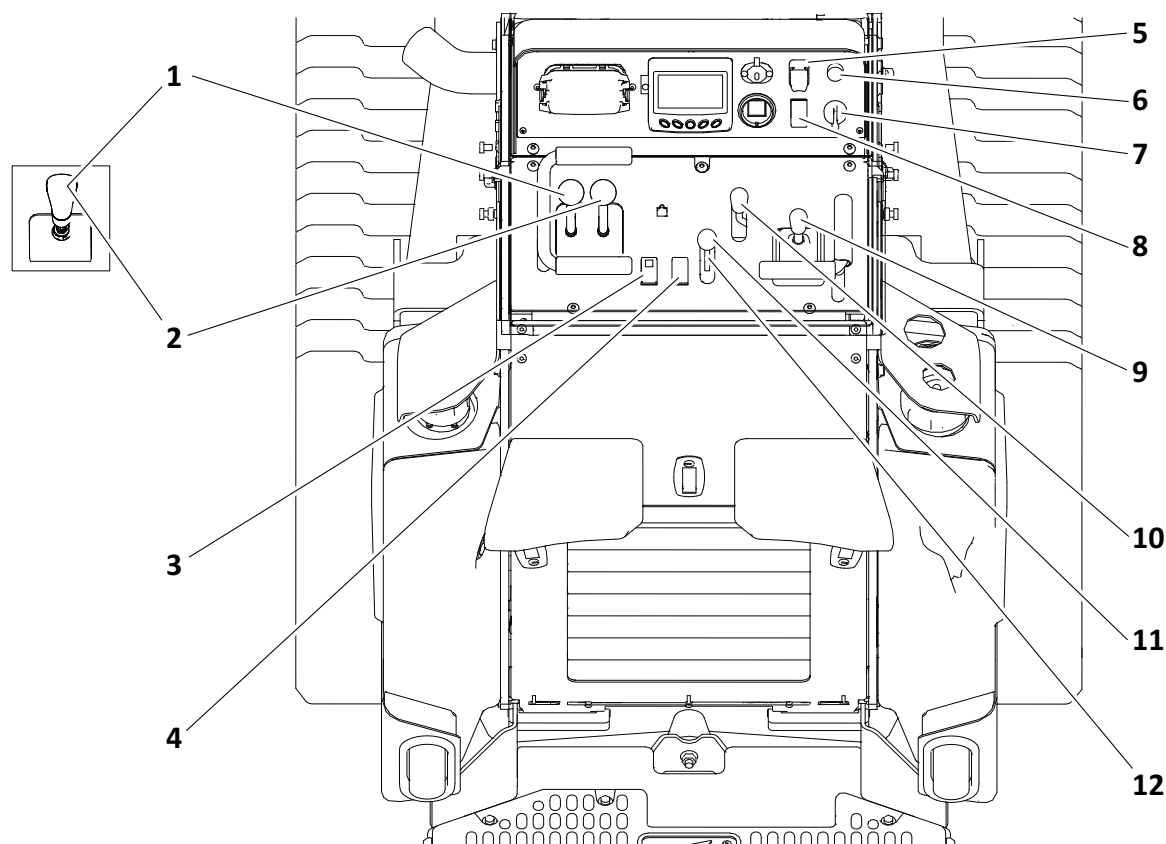






t53om002w20.eps

- | | |
|--|--------------------------------------|
| 1. Left track drive control/Track drive joystick* | 7. Ignition switch |
| 2. Right track drive control/Track drive joystick* | 8. Worklight switch |
| 3. Parking brake switch | 9. Lift arm control |
| 4. Auxiliary lock switch | 10. Auxiliary flow selection control |
| 5. Throttle | 11. Attachment drive control |
| 6. Horn* | 12. Auxiliary circuit switch |

* If equipped

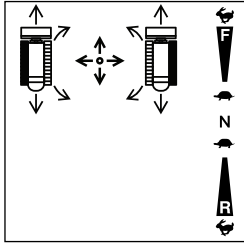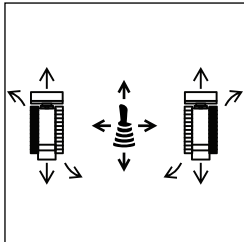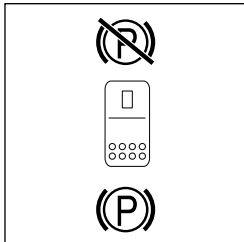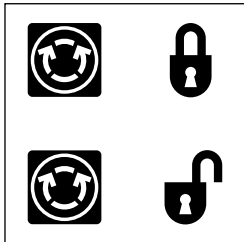
Item	Description	IMPORTANT
<p>1. Left track drive control</p> <p>2. Right track drive control</p>  <p>c00ic382w.eps</p>	<p>To drive forward, push both controls forward.</p> <p>To move in reverse, pull back.</p> <p>To go faster in any direction, move control farther from neutral position.</p> <p>To steer, move left or right.</p>	
<p>Track drive joystick</p>  <p>c00ic383w.eps</p>	<p>To drive forward, push.</p> <p>To drive in reverse, pull.</p> <p>To go faster in any direction, move farther from neutral position.</p> <p>To steer, move left or right.</p>	
<p>3. Parking brake</p>  <p>c00ic097w.eps</p>	<p>To set, press bottom.</p> <p>To release, press top.</p>	<p>Do not set parking brake when machine is moving.</p> <p>If equipped:</p> <ul style="list-style-type: none"> Engage parking brake switch to lock lift arm control lever in neutral position. Disengage parking brake switch to unlock lift arm control lever.
<p>4. Auxiliary lock switch</p>  <p>c00ic225w.eps</p>	<p>To lock auxiliary function, press top.</p> <p>To unlock, press bottom.</p>	

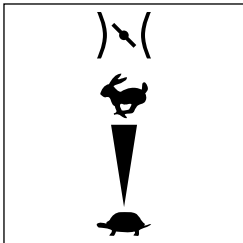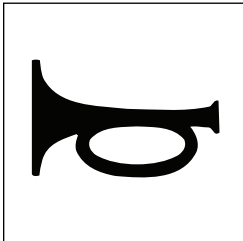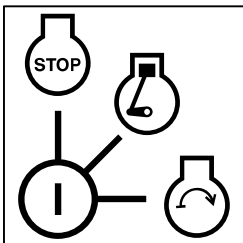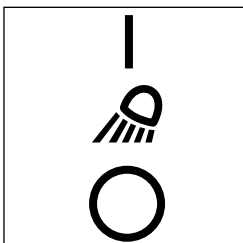Item	Description	IMPORTANT
5. Throttle  <small>c00ic391w.eps</small>	<p>To increase engine speed, push.</p> <p>To decrease, pull.</p>	<p>Control only functions if console throttle mode is selected. See "Main Menu" on page 37.</p> <p>If throttle is not set to low when engine is started or throttle mode is changed, it must be returned to low in order to function.</p>
6. Horn button  <small>c00ic194w.eps</small>	To sound horn, press.	
7. Ignition switch  <small>c00ic377w.eps</small>	<p>To activate accessories, turn right.</p> <p>To start engine, turn fully right.</p> <p>To shut off machine, turn left.</p>	
8. Work light switch  <small>c00ic048w.eps</small>	<p>To turn on, press top.</p> <p>To turn off, press bottom.</p>	

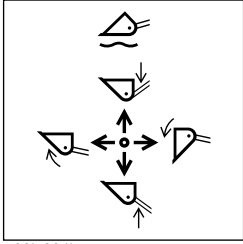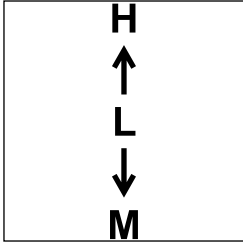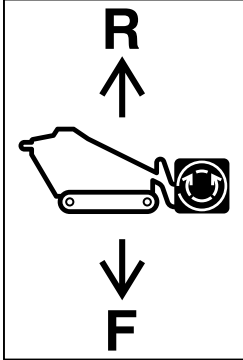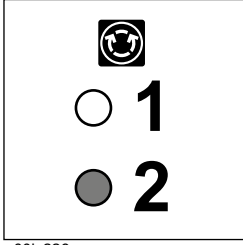Item	Description	IMPORTANT
<p>9. Lift arm control</p>  <p>c00ic284h.eps</p>	<p>To move lift arms down, push.</p> <p>To float, push to end.</p> <p>To move lift arms up, pull.</p> <p>To curl attachment up, move left.</p> <p>To curl attachment down, move right.</p>	<p>Lift arm control lever will lock in neutral position when ignition switch is turned off.</p>
<p>10. Auxiliary flow selection control</p>  <p>c00ic392w.eps</p>	<p>To select high, push.</p> <p>To select low, move to middle.</p> <p>To select medium, pull.</p>	<p>Select auxiliary flow based on attachment.</p>
<p>11. Attachment drive control</p>  <p>c00ic090a.eps</p>	<p>To move attachment in reverse, push.</p> <p>To move attachment forward, pull.</p>	<p>Use auxiliary lock switch to lock auxiliary function.</p> <p>See "Auxiliary lock switch" on page 42.</p>
<p>12. Auxiliary circuit switch</p>  <p>c00ic226w.eps</p>	<p>To toggle between primary and secondary auxiliary circuits, press.</p>	<p>Use this control based on attachment selection.</p> <p>See "Hydraulic Connection" on page 29.</p>

Drive

Chapter Contents



For additional precautions, see “Safety” and “Prepare” chapters.

IMPORTANT: For more information on how to operate controls, see “Controls” chapter.

Start 46


Operate 47

- Slope Guidelines 48
- Reduce Track Wear 49

Shut Down 49

Start


EMERGENCY SHUTDOWN: Shut off machine or press remote engine stop button (if equipped).

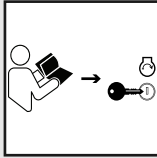**⚠ WARNING**

Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

To help avoid injury:

- Allow hydraulic fluid time to warm before operating in cold weather. Cold hydraulic fluid can lengthen ground drive stopping time.
- For starting in extreme temperatures, contact your Ditch Witch® dealer.

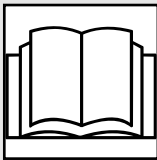**⚠ WARNING**

Horizontal movement. Crushing can cause death or serious injury. Read and understand operator's manual and all safety instructions before use.

To help avoid injury: Start and operate only from platform.

**⚠ WARNING**

Pre-heater. Fire or explosion can cause death or serious injury. Never use starter fluid.

NOTICE: If engine turns but does not start within 10 seconds, allow starter to cool. Wait at least 30 seconds and try again.

1. Ensure all controls are in neutral.
2. Set parking brake.
3. Activate accessories using ignition switch.
4. **If starting machine in normal conditions,** start engine and run at low throttle under light load for at least one minute before applying heavier load.

If starting machine in cold weather:

- 4.1 Start engine.
- 4.2 Set parking brake.
- 4.3 Warm engine and hydraulic fluid by gradually increasing engine speed for up to 30 minutes.

4.4 After warmup, carefully operate all hydraulic controls at low throttle until controls operate as described in controls chapter.

Operate

NOTICE:

- Drive carefully in congested areas. Know machine's clearance and turning radius.
- Survey field of vision when operating machine.


EMERGENCY EXIT: Release controls and step off platform.

1. Release parking brake.
2. Raise attachment off ground.
3. Drive machine.


IMPORTANT: If needed for attachment operation, lock auxiliary function. See "Auxiliary lock switch" on page 42.

4. Adjust throttle as needed.
5. See attachment operation manual for instructions regarding proper operation of attachments.

Slope Guidelines

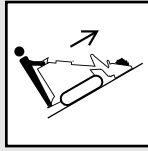**⚠ WARNING**

Tipover. Crushing can cause death or serious injury. Follow procedure in operator's manual. Drive cautiously.

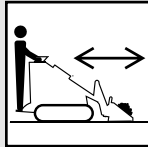To help avoid injury:

- Operate at slow speed when on rough terrain.
- Avoid driving across slopes.
- Never jerk control levers. Use a steady, even motion.
- Always operate with heavy end uphill.
- Always drive with attachment low to the ground.
- See page 91 for operating capacity.

Operating safely on a slope depends upon many factors including:

- distribution of machine weight, including front loading and absence of load
- height of load
- even or rough ground conditions
- potential for ground giving way causing unplanned tilt forward, reverse or sideways
- nearness of ditches, ruts, stumps or other obstructions and sudden changes in slope
- speed
- turning
- braking performance
- operator skill

These varying factors make it impractical to specify a maximum safe operating angle in this manual. It is therefore important for the operator to be aware of these conditions and adjust operation accordingly. Maximum engine angle and braking performance are two absolute limits which must never be exceeded. These maximums are stated below since they are design limits. **These design limits usually exceed the operating limits and must never be used alone to establish safe operating angle for variable conditions.**

Maximum engine lubrication angle: 20°

Maximum service brake retarding force: equal to traction of both tracks

Maximum parking brake holding force: equal to traction of one track

Reduce Track Wear

Rubber tracks are best suited at soil-based jobsites with minimal rocks and debris. To reduce track wear drive slowly and make wide turns. Avoid the following:

- spinning tracks under heavy load
- turning on sharp objects such as stones, broken concrete, or debris
- quick turns on asphalt or concrete
- driving over curbs or ledges
- driving with track edges pressed against hard walls or curbs
- operating on corrosive materials such as salt or fertilizer


Shut Down

1. When job is complete, move machine to level ground.
2. Stop machine movement.
3. Lower lift arms to ground.
4. Return all controls to neutral.
5. Set parking brake.
6. Run engine at low throttle with no load for at least five minutes to cool.
7. Shut off machine.
8. If leaving machine unattended, remove key.
9. For maintenance or long-term storage, disconnect battery using battery disconnect switch.

NOTICE: Wait two minutes after shutting off machine before disconnecting battery.

Transport

Chapter Contents



For additional precautions, see “Safety” and “Prepare” chapters.

IMPORTANT: For more information on how to operate controls, see “Controls” chapter.

Lift **52**


- Points 52
- Procedure 52

Haul **53**

- Inspect Trailer 53
- Load 54
- Tie Down 55
- Unload 56

Retrieve **56**

Lift

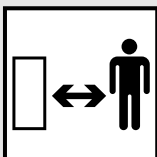
**WARNING**

Lifted load. Crushing weight can cause death or serious injury. Stay away from lifted load and its range of movement.

To help avoid injury: Only lift unit without attachment installed.

Points

Lifting points are identified by lifting decals. Lifting at other points is unsafe and can damage machinery.

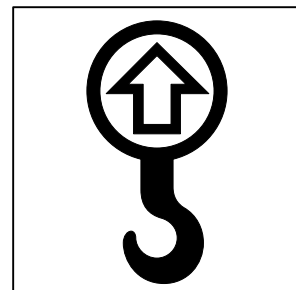


ic1319a.eps

Procedure

NOTICE: Do not lift machine with attachments installed.


IMPORTANT: Front of unit will be lower than rear.

Use a equipment capable of supporting the machine's size and weight to lift as shown. See "Specifications" on page 89 or measure and weigh equipment before lifting.

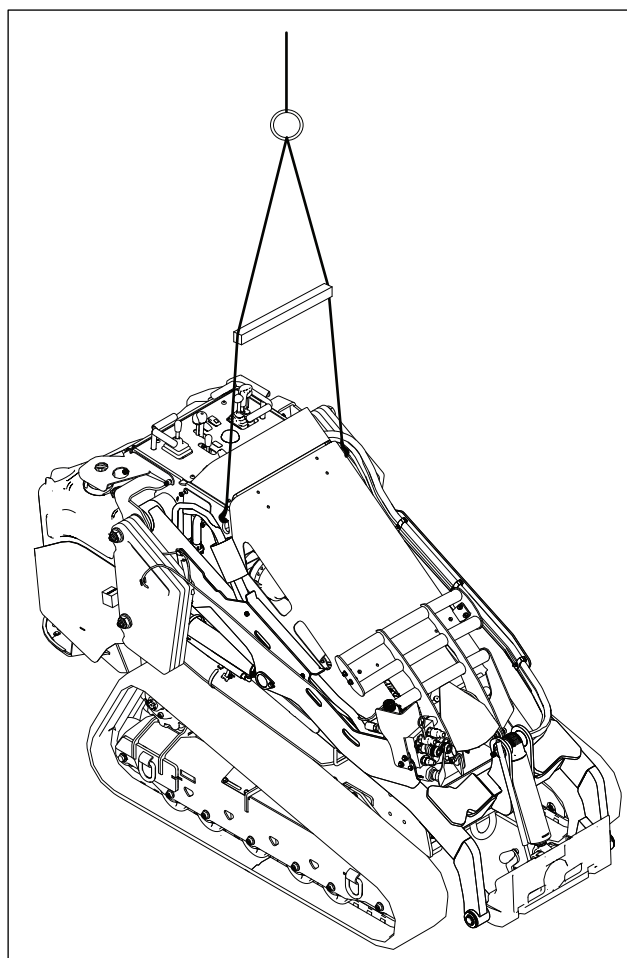

t69om004w23.eps

Haul

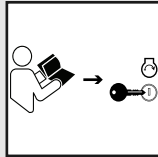**⚠ WARNING**

Misuse of machine can cause death or serious injury.
Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.


To help avoid injury:

- Read trailer operator's manual before loading or transporting machine.
- Ensure tow vehicle has proper tow capacity rating.
- Attach trailer to vehicle before loading or unloading.
- Load and unload trailer on level ground.
- To help prevent trailer sway, load trailer so that 10-15 percent of total vehicle weight (equipment plus trailer) is on tongue.
- If loading onto tilt-bed trailer, be prepared for trailer to tilt.

Inspect Trailer

- Check hitch for wear and cracks.
- Check battery for 12V charge.
- Inspect lights for cleanliness and correct operation.
- Inspect reflectors and replace if needed.
- Check tire pressure.
- Check lug nut torque.
- Ensure trailer brakes are adjusted to come on with tow vehicle brakes.
- Check trailer bed for cracks.

Load

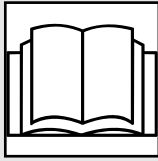

⚠ WARNING

Horizontal movement. Crushing can cause death or serious injury. Read and understand operator's manual and all safety instructions before use.


To help avoid injury: Start and operate only from platform.

1. Start engine.
2. Release parking brake.
3. Move throttle to low speed.
4. Raise attachment clear of trailer, but keep it low.
5. Move machine to rear of trailer and align with ramps.
6. Drive forward slowly to move machine onto trailer until tiedown position is reached.
7. Lower attachment to trailer bed.
8. Set parking brake.
9. Ensure all controls are in neutral position.
10. Shut off machine.
11. Tie down machine.

Tie Down

Points


Tiedown points are identified by tiedown decals. Securing to truck or trailer at other points is unsafe and can damage machinery.

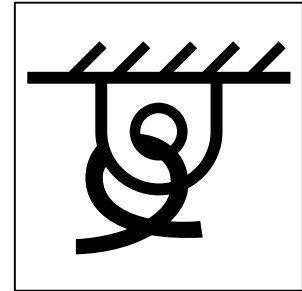

ic1320a.eps

Procedure


Loop a transport chain around each tie down point. See chart below for correct distances between tiedown ends. Ensure tiedowns are tight before transporting.

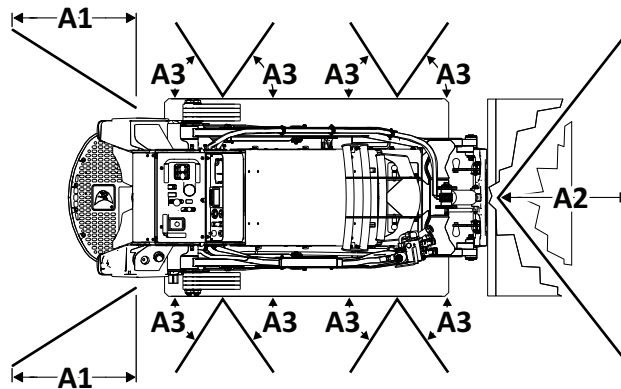

t690m012w23.eps

Distance	US	Metric
A1	10-30"	25-76cm
A2	16-40"	41-102cm
A3	30°	30°

Unload

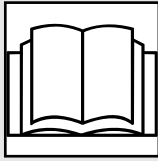**⚠ WARNING**

Horizontal movement. Crushing can cause death or serious injury. Read and understand operator's manual and all safety instructions before use.

To help avoid injury: Start and operate only from platform.


1. Prepare trailer and ramps for unloading.
2. Remove tiedowns.
3. Start engine.
4. Release parking brake.
5. Raise attachment off ground, but keep it low.
6. Move throttle to low speed and slowly back machine down trailer or ramps.

Retrieve


Under normal conditions, machine should not be towed. If machine breaks down and retrieval is necessary:

- Tow for no more than 100' (30m) at less than 1mph (1.6km/h).
 - Use towing chains appropriately rated for maximum towing force.
 - Use maximum force of 1.5 times machine weight.
1. Set parking brake if engine will start.
 2. Block tracks to prevent machine from rolling.

3. Attach chain to tow points shown facing towing vehicle.

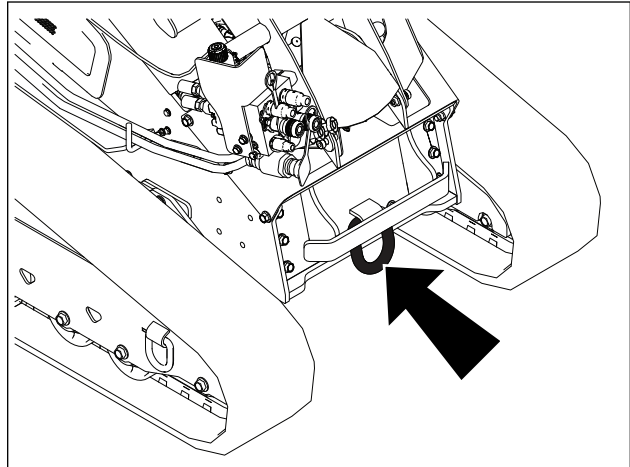


t69om005w23.eps

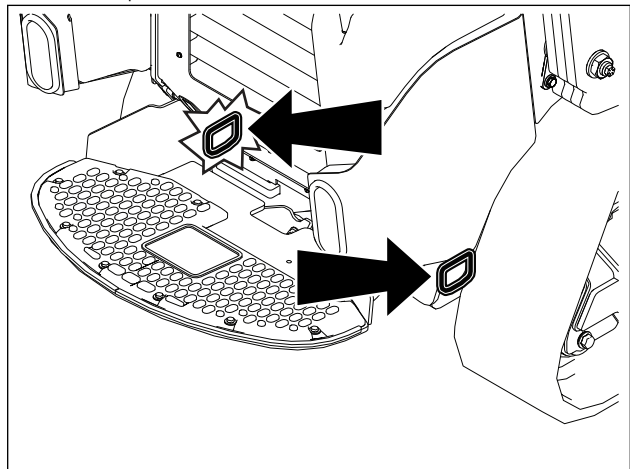

t69om006w23.eps


4. Disconnect hoses (1, 2) and connect ends together with connector (5).
5. Cap ports on ground drive pump.
6. Disconnect hoses (3, 4) and connect ends together with connector (6).
7. Cap ports on ground drive pump.
8. Remove blocks.
9. If engine will start, release parking brake.
If engine will not start, remove rear panel and unbolt parking brake assembly.
10. After towing, reassemble brake assembly, if needed.
11. Reconnect hoses to ground drive pump.

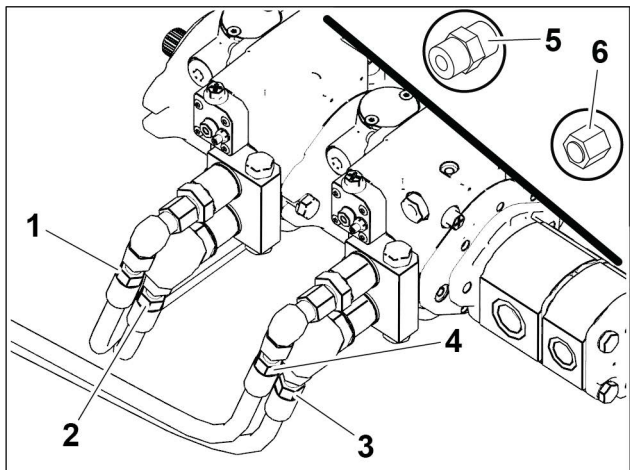

t55om041w.png

Complete the Job

Chapter Contents



For additional precautions, see “Safety” and “Prepare” chapters.

Rinse Equipment 60

Disconnect Attachment 60

Stow Tools 60

Store Machine 60

- Store Long-Term 61

Decommission Machine 61

Rinse Equipment

NOTICE:

- Never spray water onto operator's console or electrical center in engine compartment. Water can damage electrical components. Wipe down instead.
- Ensure all mud and debris is rinsed from tracks before parking unit overnight.

1. Spray water onto equipment to remove dirt and mud.
2. Remove mud from track sprockets.
3. Wash undercarriage. Pay special attention to brake pin area.

Disconnect Attachment

1. Lower attachment to the ground.
2. Turn off engine.
3. Disconnect hydraulic hoses, if used.
4. Start engine.
5. Disengage attachment pins.
6. Tilt mount plate forward and back machine away from attachment.

Stow Tools

Ensure all tools and accessories are loaded and properly secured on trailer.

Store Machine

Before storing, ensure machine is rinsed, equipment is stowed, and all fluids are filled. For more information on filling fluids, see Maintenance chapter or contact your Ditch Witch dealer.

Store Long-Term

To store machine for periods of time exceeding two months:


- Ensure exposed parts are treated with anti-rust agent.
- Touch up paint as needed to prevent rusting.
- Lubricate machine and apply grease to unpainted surfaces.
- Cover exhaust pipe.

Decommission Machine

Before decommissioning machine, follow local regulations for disposing of hazardous substances. For more information on draining fluids, see Maintenance chapter or contact your Ditch Witch dealer.

Maintenance

Chapter Contents



For additional precautions, see “Safety” and “Prepare” chapters.

Maintenance Precautions 64

- Washing Precaution 64
- Welding Precaution 65
- Working under Raised Lift Arms 65
- Opening Hood and Side Panels 66

Recommended Lubricants 67

- Engine Oil Temperature Chart 68
- Approved Coolant 68
- Approved Fuel 69
- Exhaust Cleaning 70

Maintenance Interval Chart 71

Procedures 73


Service Precautions

**⚠ WARNING**

Jobsite hazards. Exposure can cause death or serious injury. Use correct equipment and work methods. Use and maintain appropriate safety equipment.

To help avoid injury:

- Wear personal protective equipment including hard hat, safety eye wear, foot protection, hearing protection, and gloves (except when near rotating equipment).
- Remove jewelry.
- Wear close-fitting, high visibility clothing.
- Have other personal protective equipment, such as insulated boots and gloves, breathing protection, and face shield, etc. available for use depending on jobsite hazards or requirements.

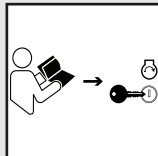**⚠ WARNING**

Misuse of machine can cause death or serious injury. Read and understand operator's manual and all other safety instructions before use. Know how to use all controls.

To help avoid injury:

- Unless otherwise instructed, all maintenance should be performed with the engine off and cool.
- Lower unsecured, raised components before servicing equipment.
- Unless otherwise instructed, all maintenance should be performed with machine parked on level surface.
- Refer to US Occupational Safety and Health Administration (OSHA) guidelines for appropriate lockout-tagout procedures.

Washing Precaution


NOTICE: Do not spray water onto operator's console or electrical center in engine compartment. Water can damage electrical components. Wipe down instead.

Welding Precaution

NOTICE: Welding can damage electronics.


- Welding currents can damage electronic components. Always disconnect the ECU ground connection from the frame, harness connections to the ECU, and other electronic components prior to welding on machine or attachments.
- Connect welder ground close to welding point and make sure no electronic components are in the ground path.
- Disconnect battery at battery disconnect switch before welding to prevent damage to battery. See "Battery" on page 73.
- Never turn off battery disconnect switch with engine running, or alternator and other electronic equipment devices may be damaged.

Working under Raised Lift Arms

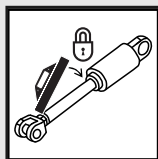

⚠ WARNING Raised component. Crushing can cause death or serious injury. Stay away or secure raised component with locking device. Use correct equipment and procedures.


Pin safety supports as shown when working under raised lift arms.

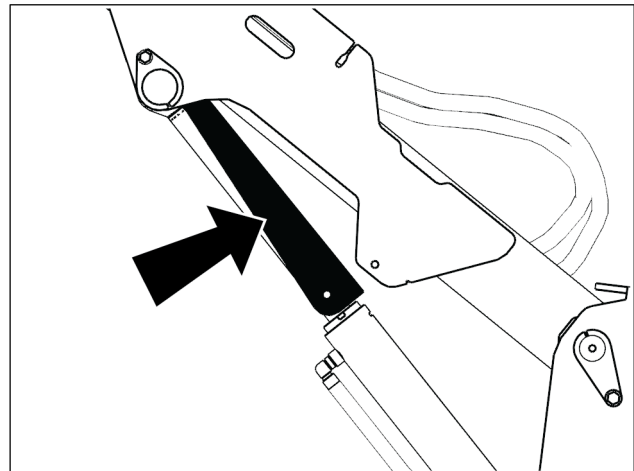

t55om042w.png


Opening Hood and Side Panels

1. Retrieve key (shown) from storage location.

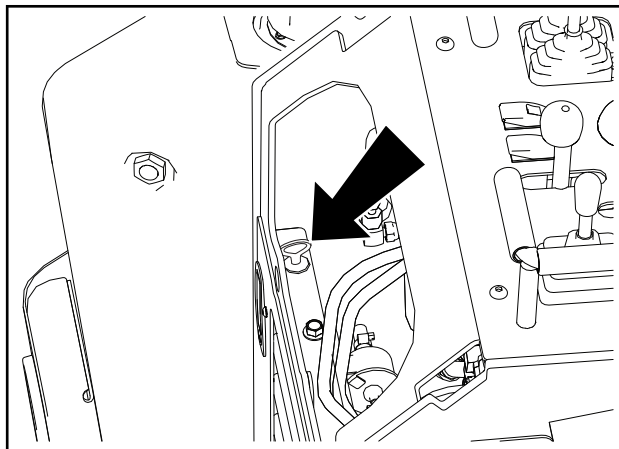



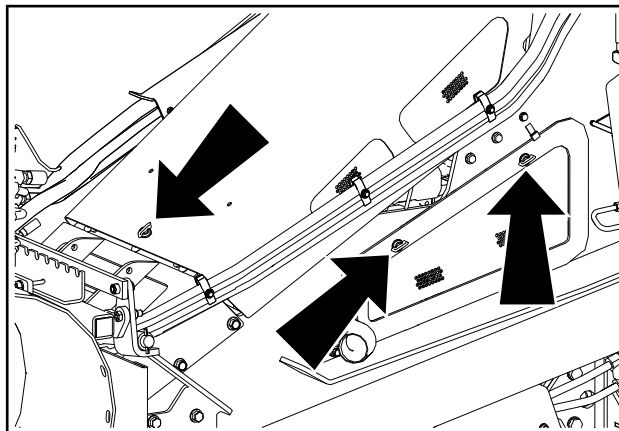

t69om002w25.eps

2. Unlock latches (shown) by inserting key and turning counterclockwise.
3. Return key to storage location during maintenance.
4. After maintenance, close hood and side panels.
5. Lock latches on side panels by inserting key and turning clockwise. Latch on hood will lock automatically.
6. Return key to storage location.



t69om003w25.eps


Recommended Lubricants

Item	Description
 DEAC	Low silicate, fully formulated diesel engine antifreeze/coolant meeting ASTM D6210. See "Approved Coolant" on page 68.
 DEO	Diesel engine oil meeting or exceeding API service classification CJ-4, ACEA E6, or JASO DH-2. See "Engine Oil Temperature Chart" on page 68. API American Petroleum Institute, ACEA European Automobile Manufacturer's Association
 MPG	Multipurpose grease, lithium based NLGI GC-LB Grade 2
 THF	Tractor hydraulic fluid, Phillips 66® PowerTran Fluid, Mobilfluid® 423, Chevron® Tractor Hydraulic Fluid, Texaco® TDH Oil, or equivalent

Proper lubrication and maintenance protects Ditch Witch equipment from damage and failure. Maintenance intervals listed are for minimum requirements. In extreme conditions, service machine more frequently. Use only genuine Ditch Witch parts, filters, approved lubricants, TJC, and approved coolants to maintain warranty. Fill to capacities listed in "Fluid Capacities" on page 92.

For more information on engine lubrication and maintenance, see your engine manual.

Engine Oil Temperature Chart

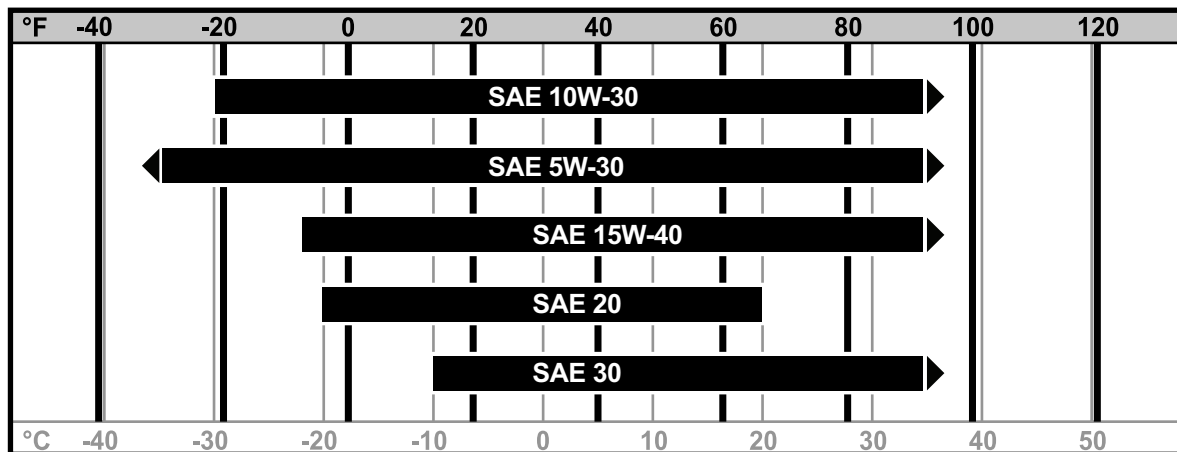

t43om040w.eps

Temperature range anticipated before next oil change


Approved Coolant

NOTICE:

- Use only pre-diluted coolant or concentrated coolant mixed with distilled water. Do not use tap water.
- Using water or high-silicate automotive-type coolant will lead to engine damage or premature engine failure.
- Mixing heavy-duty diesel engine coolant and automotive-type coolants will lead to coolant breakdown and engine damage.

This machine was filled with coolant meeting ASTM D6210 before shipment from factory. Add or replace only with low silicate, fully formulated diesel engine coolant meeting this specification. Coolant meeting this specification is available, pre-diluted, from your Ditch Witch® dealer as part number 255-1055 (Fleetguard ES Compleat).

Approved Fuel

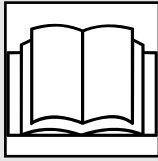**⚠ WARNING**

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher sulfur content. Avoid death or serious injury from fire or explosion; consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

This engine is designed to run on diesel fuel. Use only high quality fuel meeting ASTM D975 No. 2D, EN590, or equivalent. At temperatures below 32°F (0°C) winter fuel blends are acceptable. See the engine manual for more information.

NOTICE: Use only Ultra Low Sulfur Diesel (less than 15ppm sulfur content in the US and Canada or 10mg/kg in EU and Japan) in this unit. Operating with higher sulfur content will damage the engine and aftertreatment device.

Biodiesel blends up to 5% (B5) are approved for use in this unit. The fuel must meet the specifications for diesel fuel shown above. In certain markets, higher blends may be used if certain steps are taken. Extra attention is needed when using biodiesel, especially when operating in cold weather or storing fuel. Contact your Ditch Witch® dealer or the engine manufacturer for more information.

Exhaust Cleaning

This engine has a Diesel Particulate Filter (DPF) that separates soot caused by the combustion of diesel fuel from the exhaust gases exiting the engine. The DPF must be cleaned as the soot level increases.

Sensors in the engine monitor the exhaust status. When a cleaning cycle is needed, the system will create a pop-up message indicating cleaning is needed and power loss may occur. The exhaust cleaning icon will flash. Follow on-screen prompts for exhaust cleaning. An operator may choose to hide and ignore this message. If so, the icon will continue to flash and the message will reappear after fifteen minutes.



If the operator continues to ignore the cleaning request, the system will create a pop-up message indicating cleaning is needed and power loss will occur. Engine power reduced by 25%. The exhaust cleaning icon will flash and the engine caution icon will appear. Follow on-screen prompts for exhaust cleaning. An operator may choose to hide and ignore this message. If so, the icons will continue to display and the message will reappear after five minutes.



If the operator continues to ignore the cleaning request, the system will create a pop-up message indicating exhaust service is required. Engine derating has been activated. Contact Deutz® service. The exhaust cleaning and the engine stop icons will flash. An operator may choose to hide and ignore this message. If so, the icons will continue to display and the message will reappear after one minute.



Once the operator starts the exhaust cleaning cycle, adjusting the throttle or releasing the parking brake will terminate the cycle. A typical cycle will take approximately 35 minutes. A pop-up message will display the remaining time in the cycle. The high exhaust temperature icon may also light.

The frequency of exhaust cleaning is dependent upon working conditions. In general, operating in hotter conditions and higher loads will lengthen the time between cleaning cycles.



Maintenance Interval Chart

IMPORTANT: Chart indicates first instance of repeated service procedures. See detailed information below.

▽	Adjust, service, or test	□	Change, initial	○	Lube, initial
▲	Check	■	Change	●	Lube

Service	Startup	10 Hours	50 Hours	100 Hours	250 Hours	500 Hours	1000 Hours	As Needed
Battery		▲						▽
Belt, fan			▲		▲	■		▽
Coolant	▲	▲					■	
Dust ejector valve	▲	▲						
Engine compartment		▲						
Filter, air	▲	▲						■
Filter, engine oil (see Oil, engine)								
Filter, fuel						■		
Filter, hydraulic fluid			□		■			
Filter, water separator	▲	▲				■		▽
Fluid, hydraulic	▲	▲				■		
Fuel hose			▲					
Fuse box	▲							
Hydraulic hoses	▲	▲						
Idler roller bearings			▲	●				▽
Intake air line					▲			
Oil, engine	▲	▲	□		■			

Maintenance Interval Chart

Service	Startup	10 Hours	50 Hours	100 Hours	250 Hours	500 Hours	1000 Hours	As Needed
Parking brake	▲	▲						
Platform switch								▽
Radiator/Hydraulic fluid cooler			▲					▽
Track tension	▲	▲						▽

Procedures

Battery



⚠ WARNING Corrosive fluid. Contact can cause death or serious injury. Avoid contact. Wear appropriate gloves. See Safety Data Sheet (SDS) for more information.

To help avoid injury:

- Never attempt to charge a battery that is leaking, bulging, heavily corroded, frozen, or otherwise damaged.
- Refer to Safety Data Sheet (SDS) for additional information regarding battery.



⚠ WARNING Explosive hydrogen gas. Fire or explosion can cause death or serious injury. Keep heat flames, sparks, and other sources of ignition away.

To help avoid injury:

- Use a single 12V maximum source for charging. Never connect to rapid chargers or dual batteries.
- Never lean over battery when making connections.
- Never allow vehicles to touch when charging.
- Never short-circuit battery terminals for any reason or strike battery posts or cable terminals.
- Refer to Safety Data Sheet (SDS) for additional information regarding battery.


NOTICE:

- Electronic components can be easily damaged by electrical surges. Jump starting can damage electronics and electrical systems, and is not recommended. Try to charge the battery instead. Use quality large diameter jumper cables capable of carrying high currents (400 amps or more). Low quality cables may not allow enough current flow to charge a dead/discharged battery.
- Read all steps thoroughly and review illustration before performing procedure.

Check every 10 hours. Charge as needed.

Check

1. Disconnect battery at battery disconnect switch, if equipped.
2. Ensure no ignition sources are near battery.
3. Loosen and remove battery cable clamps carefully, negative (-) cable first.
4. Clean cable clamps and terminals to remove dull glaze.
5. Check for signs of internal corrosion in cables.
6. Connect battery cable clamps, positive (+) cable first.
7. Tighten any loose connections.
8. Ensure that battery tiedowns are secure.
9. Turn battery disconnect, if equipped, on.

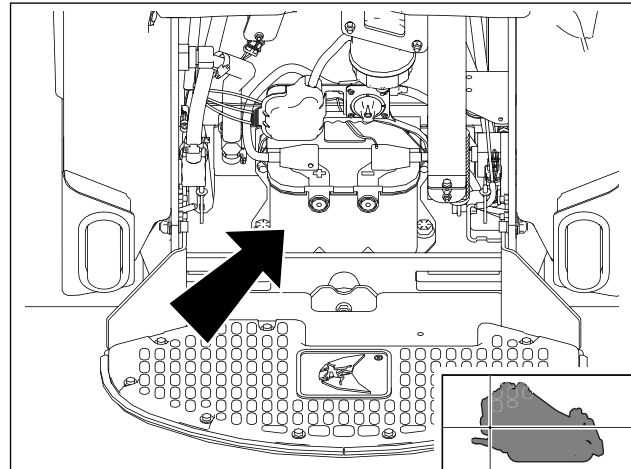


t53om036w20.eps

Charge

1. Park service vehicle close to disabled equipment but do not allow vehicles to touch.
2. Set parking brake in both vehicles.
3. Turn ignition switch off in both vehicles and turn off all electrical loads.
4. Disconnect machine controller, if equipped.
5. Inspect battery in disabled machine (B) for signs of cracking, bulging, leaking, or other damage.
6. Connect red positive (+) jumper cable clamp to positive (+) post of battery (2) in disabled machine.

IMPORTANT: Some equipment may have a positive jumper cable terminal (1) located externally. If so equipped, connect red positive (+) jumper cable clamp to terminal.

7. Connect the other red positive (+) jumper cable clamp to positive (+) post of battery in service vehicle (A).
8. Connect black negative (-) cable clamp to negative (-) post of battery in service vehicle.
9. Connect the other black negative (-) cable clamp to engine or frame ground on disabled machine, at least 12" (305 mm) from failed battery, as shown.
10. Operate service vehicle engine at 1500-2000 rpm for a few minutes to build an electrical charge in failed battery.
11. Stop engine in service vehicle.
12. Remove jumper cables from service vehicle, black negative (-) clamp first. Do not allow clamps to touch.
13. Remove black negative (-) cable clamp from disabled engine or frame ground.
14. Remove red positive (+) cable clamp from disabled machine.
15. Reconnect machine controller, if equipped.
16. Start disabled machine.

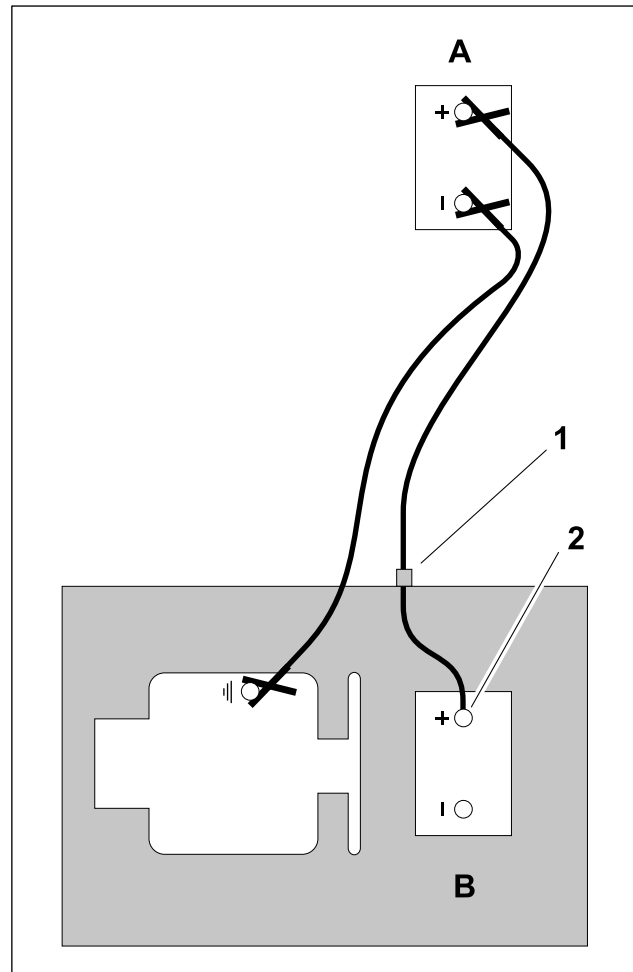

Belt, Fan

Check at 50 hours and every 250 hours thereafter. Adjust tension as needed. Change every 500 hours.

Check


Check for excessive slack, damage, or wear. Belt is properly tensioned when it moves about 1/4-3/8" (7-9mm) when pushed at long span (shown).

Adjust Tension

1. Loosen two alternator bolts (1, 2).
2. Adjust position as needed.
3. Tighten bolts.
4. Check tension.

Change

1. Loosen two alternator bolts (1,2).
2. Replace fan belt.
3. Adjust position as needed.
4. Tighten bolts.
5. Check tension.

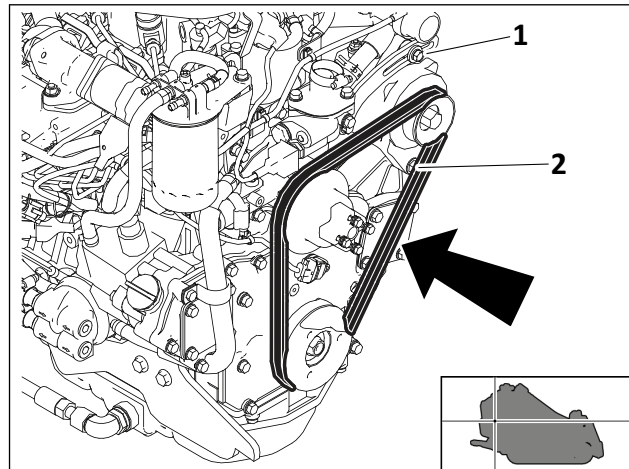

Coolant

NOTICE: See "Approved Coolant" on page 68.


Check before startup and every 10 hours. Change every 1000 hours.

Check Level

1. Check at overflow bottle (2).
2. Add DEAC at fill (1) as needed to keep level at halfway point on overflow bottle.

Change


1. Remove plug (3) to drain.
2. Install plug.
3. Add DEAC at fill to keep level at halfway point on overflow bottle.

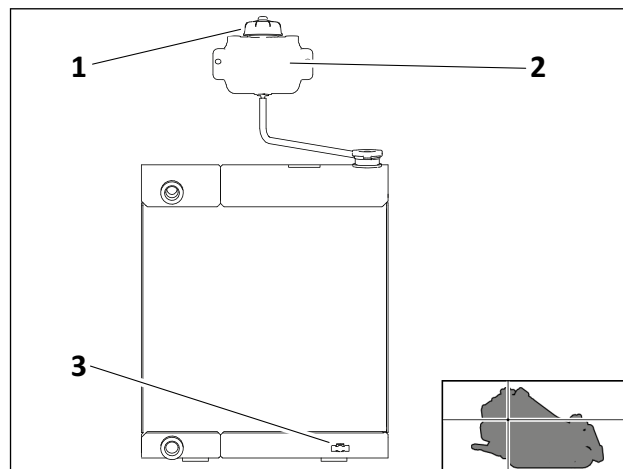

t530m038w20.eps

Dust Ejector Valve

Check dust ejector valve (shown) before startup and every 10 hours. Ensure valve is not inverted, damaged, plugged, or cracked.

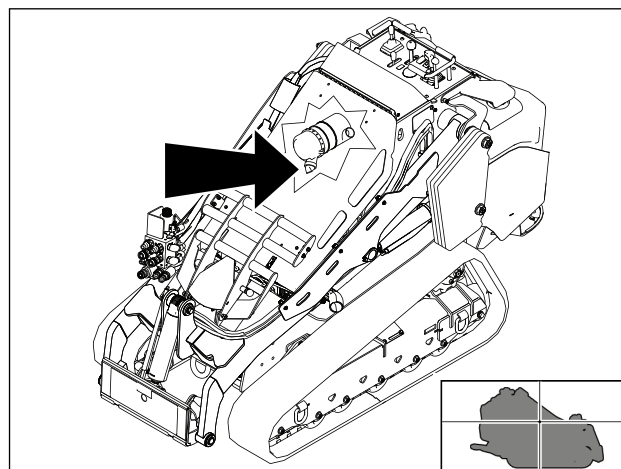


t690m007w23.eps

Engine Compartment

NOTICE: Check more often if operating in large brush, grassy conditions, or if machine is being stored.

Check for debris every 10 hours. Remove debris from engine compartment manually. Do not use water or compressed air.

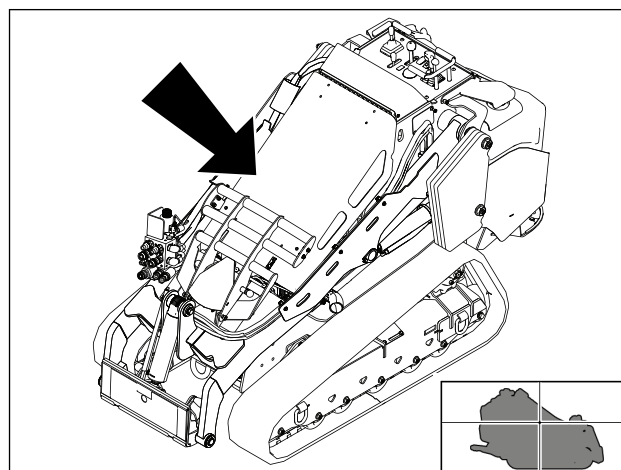

t690m008w23.eps

Filter, Air

NOTICE:

- Only open air filter housing when red band on indicator is visible.
- Change the elements. Do not attempt to clean them.
- Improperly installed primary element can lead to premature engine failure.
- Compressed air or water can damage filter elements.
- Tapping filter elements to loosen dirt can damage elements.


Check before startup and every 10 hours. Change when needed.

Check

Check air filter service indicator (1). Change filter when red band on indicator is visible.

Change


1. Remove cover (5).
2. Remove primary element (4).
3. Wipe inside of housing (2) and cover.
4. Insert secondary element (3) and ensure it is seated correctly.
5. Insert new primary element.
6. Install cover with dust ejector (6) facing down.
7. Reset air filter service indicator.

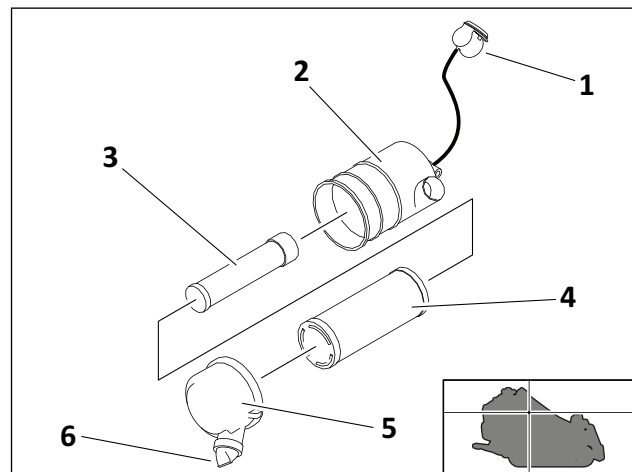

t53om040w20.eps

Filter, Fuel


Change filter (shown) every 500 hours. If refueling from cans, replace filters more often.

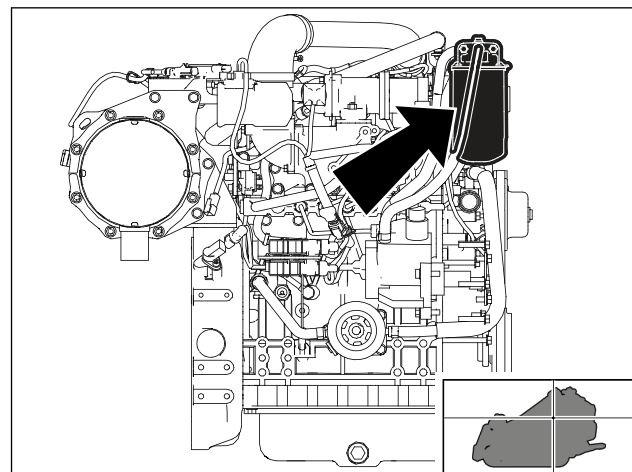

t53om041w20.eps

Filter, Hydraulic Fluid

Change filter (shown) at 50 hours and every 250 hours thereafter.

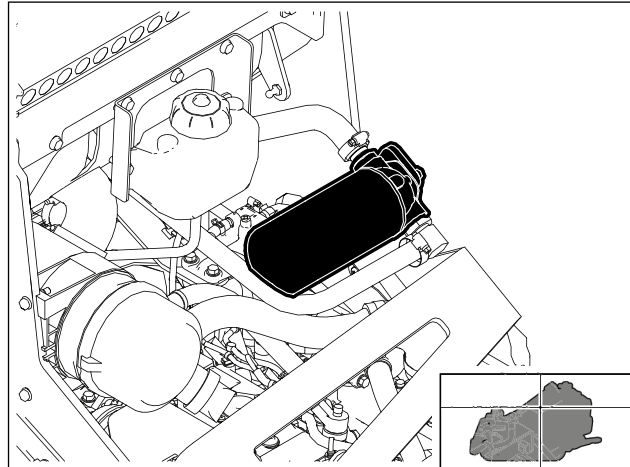

t53om042w20.eps

Filter, Water Separator


Check before startup and every 10 hours. Change every 500 hours. Drain as needed.

Check

When red floating ring is raised, drain.

Drain

1. Turn off at valve (1).
2. Remove plug (2) to drain.
3. Install plug.
4. Turn on at valve.
5. Start engine. Filter will purge air from system.

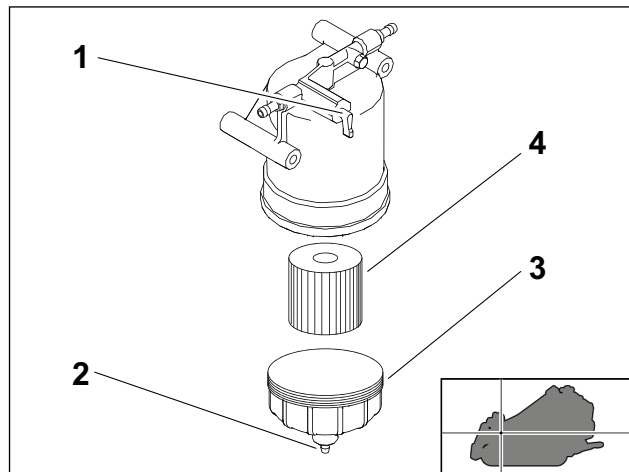

t53om043w20.eps

Change

1. Turn off at valve.
2. Remove plug to drain.
3. Remove cover (3).
4. Replace filter (4).
5. Install cover.
6. Install plug.
7. Turn on at valve.
8. Start engine. Filter will purge air from system.


Fluid, Hydraulic

NOTICE: Change every 250 hours if jobsite temperature exceeds 100°F (38°C) more than 50% of the time.

Check before startup and every 10 hours. Change every 500 hours.

Check Level

1. Check level at sight glass (2).
2. Add THF at fill (1) as needed to keep level at halfway point on sight glass when engine is off, cylinders are fully retracted, and fluid is cool.

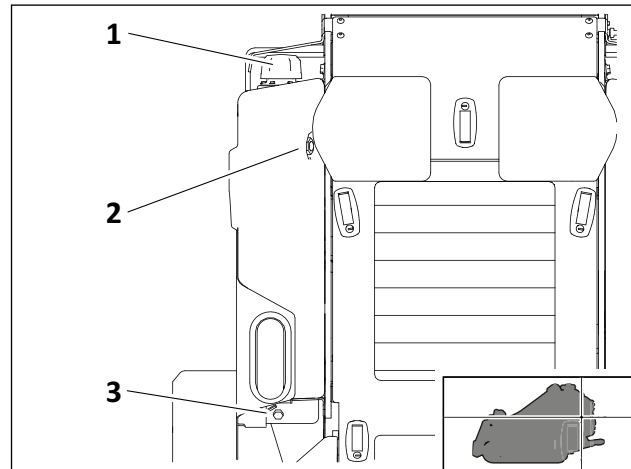

t53om044w20.eps

Change Fluid


1. Remove plug (3) to drain.
2. Install plug.
3. Add THF at fill to keep level at halfway point on sight glass.

Fuel Hose

Check fuel hose (shown) and clamp bands every 50 hours.

If clamp is loose, apply oil to the threads and retighten. If hose is worn, replace.

Bleed fuel system if hose and/or clamp is changed.

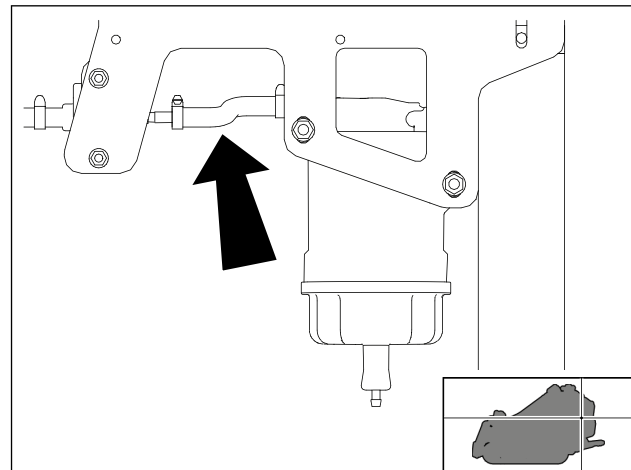


t53om045w20.eps

Fuse Box


IMPORTANT: Leave cover in place unless fuses are being checked or replaced.

Check fuse box cover for damage before startup.
If cover is missing or damaged, replace.

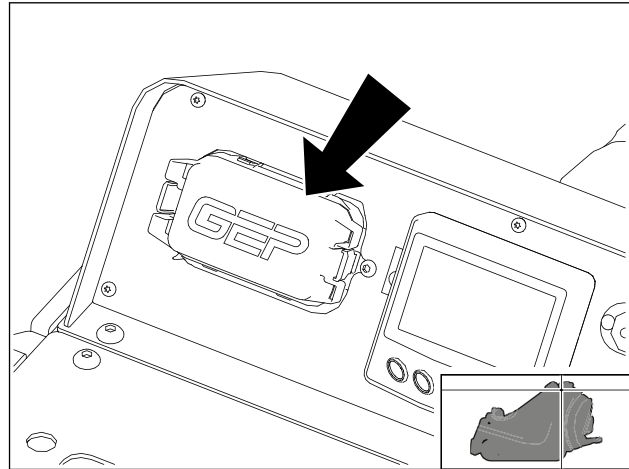

t53om059w20.eps

Hydraulic Hoses

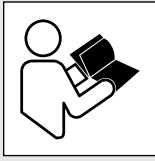


⚠ WARNING Pressurized fluid or air. Injection can cause death or serious injury. Refer to operator's manual for correct use.

To help avoid injury:

- Use a piece of cardboard or wood, rather than hands, to check for leaks.
- Before disconnecting a hydraulic line, turn engine off and operate all controls to relieve pressure.
- Contact your Ditch Witch dealer for assistance with relieving trapped pressure.
- Lower, block, or support any raised component with a hoist.
- Cover connection with heavy cloth and loosen connector nut slightly to relieve residual pressure. Catch all fluid in a container.
- Before using system, check that all connections are tight and all lines are undamaged.
- If you are injured, seek immediate medical attention from a doctor familiar with this type of injury.

Check for leaks where shown before startup and every 10 hours of operation.

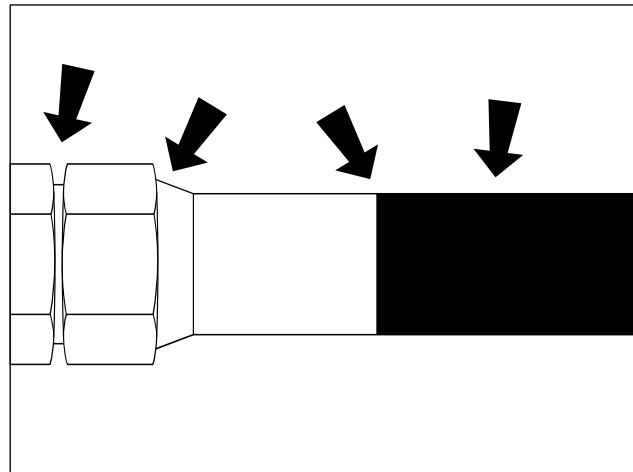

CheckHoses.eps


Intake Air Line

NOTICE: Keep dust out of the intake air line to prevent damage to the engine.

Check intake air line (shown) for dirt and debris every 250 hours.

If clamp is loose, apply oil to threads and retighten.

If hose is cracked or worn, replace.

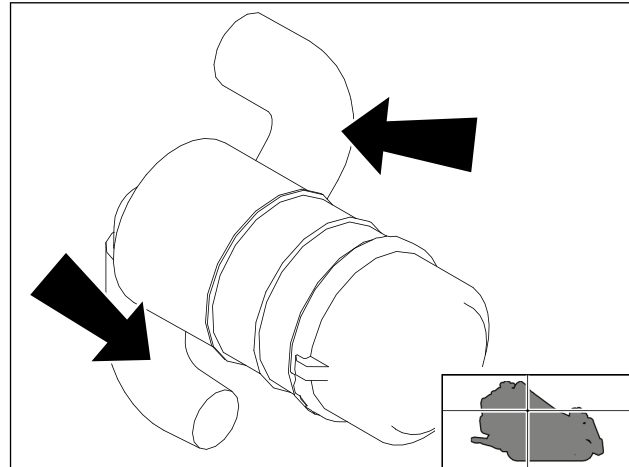

t53om049w20.eps

Oil, Engine


Check before startup and every 10 hours. Change at 50 hours and every 250 hours thereafter.

Check Level

1. Check level at dipstick (4).
2. Add DEO at fill (3) as needed to keep level at highest line on dipstick.

Change Oil and Filter

1. While oil is warm, remove plug (1) to drain.
2. Install plug.
3. Remove filter (2) and replace with new filter.
4. Add DEO at fill to keep level at highest line on dipstick.

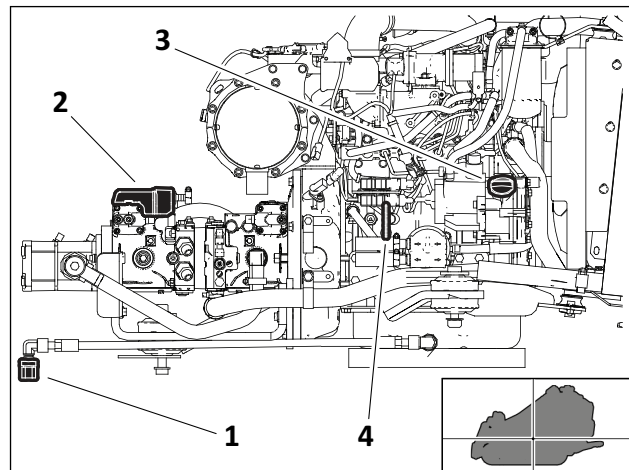


t53om051w20.eps

Parking Brake

Check before startup and every 10 hours.

1. Start engine.
2. Ensure parking brake pin (shown) moves freely allowing brake to be set and released.
3. Clean mud and debris from area around pin.

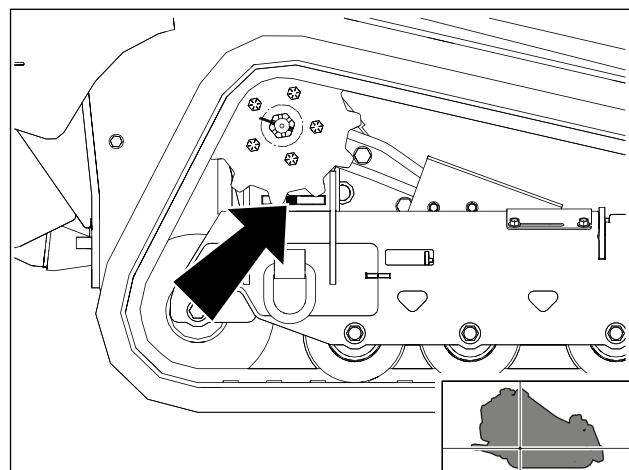


t69om009w23.eps

Platform Switch

Adjust if auxiliary controls do not operate properly when stepping on platform.

If control does not stay engaged when standing on platform:

1. Loosen two screws (1).
2. Tilt switch (2) up and tighten screws.
3. Stand on platform and turn ignition switch.
4. Ensure auxiliary control(s) stay engaged.
5. Repeat steps 1-4 if needed.

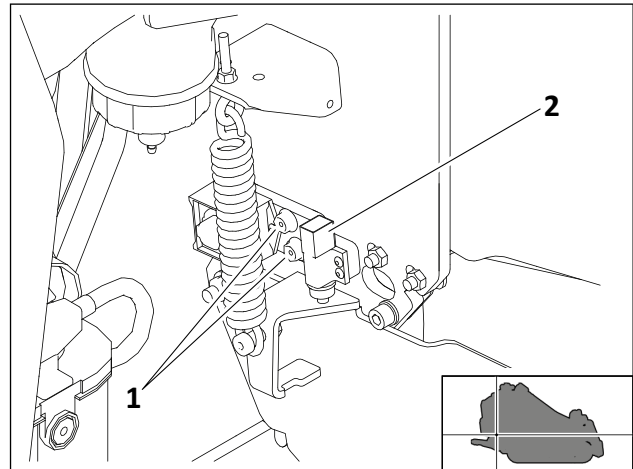

If control does not return to neutral when operator steps off platform:

1. Loosen two screws (1).
2. Tilt switch (2) down and tighten screws.
3. Stand on platform and turn ignition switch.
4. Operate auxiliary control(s) and step off platform. Control should return to neutral within two seconds.
5. Repeat steps 1-4 if needed.


Radiator/Hydraulic Fluid Cooler

NOTICE: Radiator may need to be cleaned more frequently in dusty or grassy conditions.

Check every 50 hours. Clean as needed.

Check

Check radiator (shown) for dirt, grass, and other debris. Check radiator hoses for wear. Check hose clamps for proper tightness.

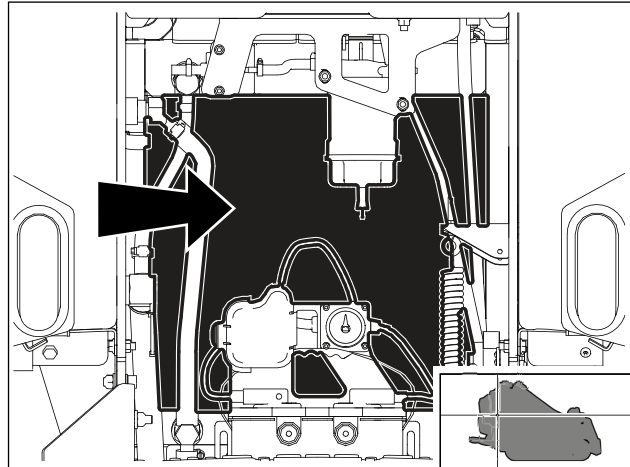

t53om054w20.eps


Clean

1. Clean fins with compressed air or spray wash.

NOTICE: Do not damage fins with high pressure air or water.

2. Open rear hood and spray through radiator toward engine.
3. If grease and oil are present on radiator, spray with solvent and allow to soak overnight.

Track Tension

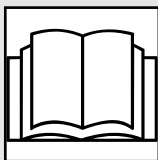

⚠ WARNING Contents under pressure. Impact can cause death or serious injury. Relieve pressure before opening.

To help avoid injury:

- Service track grease cylinder only while standing away from zerk.
- Cover connection with heavy cloth when relieving pressure in cylinder.


Check before startup and every 10 hours. Adjust as needed using one of the methods below, depending on machine configuration.

Check

When track is properly tensioned, plate (2) will be aligned in window.

If tension is low, plate will appear in window (A).


If tension is high, plate will appear as shown in B.

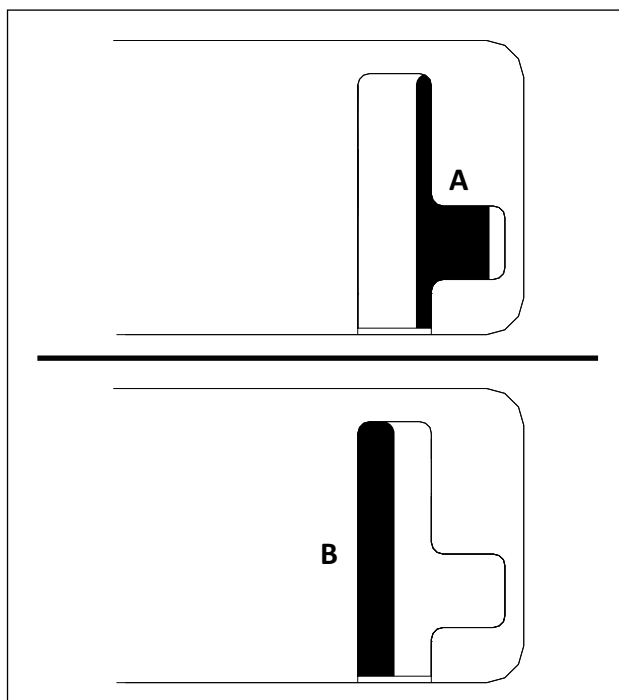

t69om013w23.eps

Adjust

1. Loosen bolts (1).
2. Slide cover plate so grease zerk and pressure relief screw are accessible (as shown).

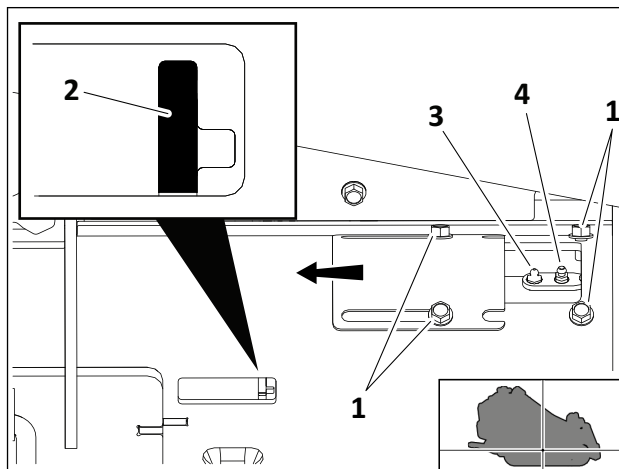

t69om010w23.eps

3. Adjust tension.
 - To tighten track, pump MPG into grease zerk (3) until plate aligns with slot as shown (2).
 - To loosen track, loosen pressure relief screw (4) slowly until grease begins to flow. Torque screw to 20in•lb (27N•m) Then follow tightening procedure to set proper track tension.
4. Slide cover plate back to original position and tighten bolts.
5. Start engine.
6. Drive forward or backward one machine length and check track tension. Adjust as needed.

Specifications

Specifications are called out according to SAE recommended practices. Specifications are general and subject to change without notice. If exact measurements are required, equipment should be weighed and measured. Due to selected options, delivered equipment may not match that shown.


Chapter Contents

SK1750 90

EU Declaration of Conformity 93

UK Declaration of Conformity..... 94

SK1750

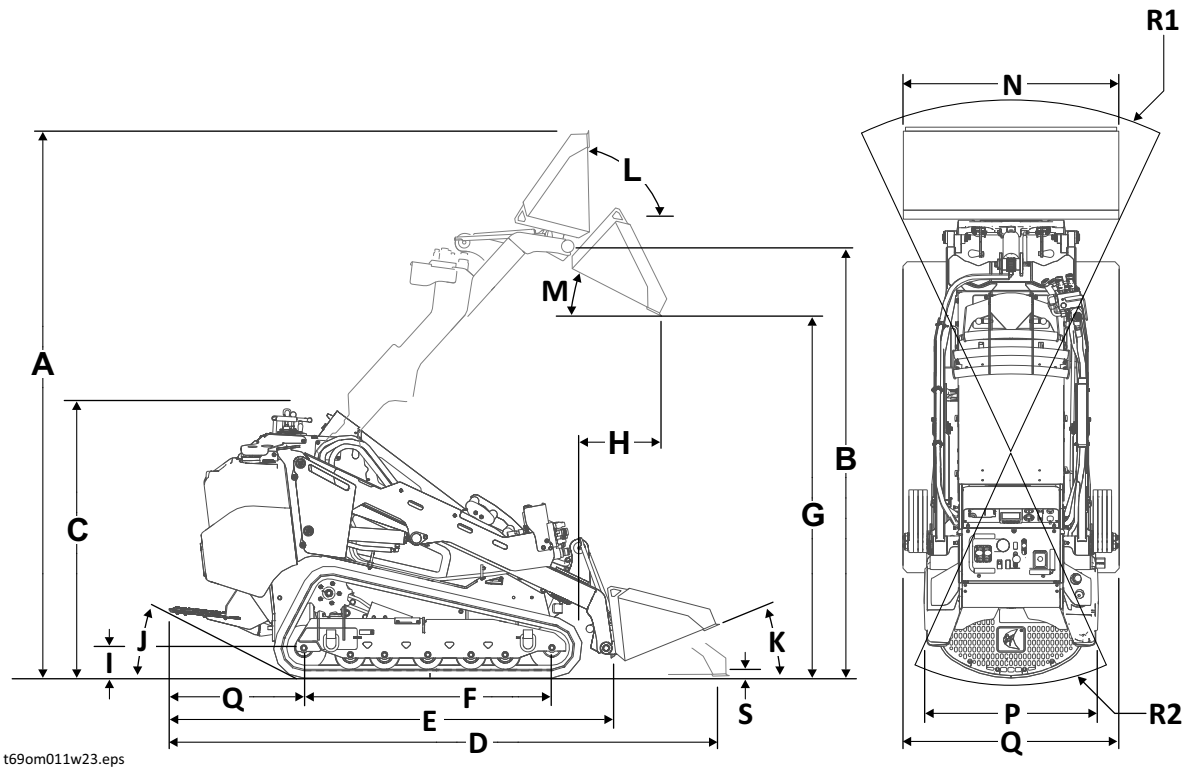

Dimensions		US	Metric
A	Operating height, max, 60" (1.5m) bucket	128.4in	3261.4mm
B	Hinge pin height, max	94.5in	2400.3mm
C	Overall height of machine	58.6in	1488.4mm
D	Overall length of machine, 60" (1.5m) bucket	124.2in	3154.7mm
E	Overall length of loader, no attachment	99.7in	2531.4mm
F	Wheelbase/track length	54.5in	1384.3mm
G	Dump height, max, with 60" (1.5m) bucket	68.5in	1739.9mm
H	Reach, 60" (1.5m) bucket at max dump height	33.2in	843.3mm
I	Ground clearance, min (center)	9.3in	236.2mm
	Ground clearance, min (side)	7.1in	180.3mm
J	Angle of departure	27.7°	27.7°
K	Bucket rollback angle, ground level	23.7°	23.7°
L	Bucket rollback angle, full height	92°	92°

Dimensions		US	Metric
M	Dump angle, 60" (1.5m) bucket	36.1°	36.1°
N	Bucket width, max	60in	1524mm
	Bucket width, min	44in	1118mm
O	Track width	47.0in	1193.8mm
P	Machine width, excluding tracks	37.5in	952.5mm
Q	Rear overhang, max	29.6in	751.8mm
R1	Swing radius, max, 60" (1.5m) bucket	76.5in	1943.1mm
R2	Swing radius, no attachment	59.2in	1503.7mm

Operation		US	Metric
Ground drive speed, forward		4.1mph	6.6km/h
Ground drive speed, reverse		4.1mph	6.6km/h
Ground pressure, 10.4" (265mm) tracks *		3.8psi	0.26bar
Machine weight (no attachment, fluids full)		4290lb	1945.9kg
Operating capacity (35% of tipping capacity)		1824lb	827.4kg
Operating capacity, with weight kit		4710lb	2136.4kg
Tipping capacity		5213lb	2364.6kg
<p>The rated operating capacity for this machine was determined using a standard bucket in the maximum reach position with center of gravity 7" (18cm) from the attachment plate. Depending on the attachment, the actual operating capacity of the attachment may vary.</p>			

* Includes machine weight, 193.4-lb (87.7-kg) bucket, 165-lb (75-kg) operator

Power Plant		US	Metric
Engine: Yanmar® 3TNV86CT-DDT2, EPA Tier 4, EU Stage V			
	Fuel	Diesel	
	Number of cylinders	3	
	Displacement	95.8in ³	1.57L
	Bore	3.39in	86mm
	Stroke	3.54in	90mm
Manufacturer's gross power rating (per SAE J1955)		43.5hp	32.4kW

Power Plant	US	Metric
Rated engine speed	3000rpm	3000rpm

Hydraulic System	US	Metric
------------------	----	--------

Auxiliary: double gear pump

Flow rate (high)	16gpm	60.6L/min
Flow rate (medium)	13gpm	49.2L/min
Flow rate (low)	3gpm	11.4L/min
Pressure	3625psi	250bar

Ground drive: dual hydrostat

Flow rate	16.6gpm	62.8L/min
Pressure	3800psi	262bar

Fluid Capacities	US	Metric
------------------	----	--------

Coolant	1.28gal	4.8L
Engine oil, with filter	5.0qt	4.7L
Fuel tank	10.5gal	40L
Hydraulic reservoir	9.2gal	35L

Battery

SAE reserve capacity 110min, SAE cold crank @ 0°F (-18°C) 800amp, 12V electrical system

Vibration Levels

Operator hand/arm	2.9 m/s ² ±1.5 m/s ²
Operator whole body	1 m/s ² ±0.5 m/s ²

Vibration levels listed are for typical operation with a loader bucket. Actual jobsite conditions could be different.

Noise Level

Operator sound pressure per ISO 6394	91 dBa ±2 dBa
Exterior sound power per ISO 6393	104 dBa ±2 dBa

Actual noise emission in jobsite conditions could be different. Always wear appropriate hearing protection when operating the machine.

EU Declaration of Conformity

The Charles Machine Works Inc., PO Box 66, 1959 West Fir Avenue, Perry, Oklahoma, USA, declares that the following unit(s):

Model	Serial Number	Description
XXXXX	XXXXXXXXXXXXXXXXXX	Compact Tool Carrier

Conform(s) to the following directives:

2006/42/EC (Machinery Directive) and 2014/30/EU (Electromagnetic Compatibility Directive)

Each model listed has been evaluated with the following standards and/or other normative documents:

EN 474-1:2022

EN ISO 13766-1:2018

The Technical Construction File is maintained at the manufacturer's location. The Authorized representative designated below is authorized to make the technical information available to the competent authorities of the Member States in response to a duly reasoned request.

This declaration has been issued under the sole responsibility of the manufacturer.
The object of the declaration is in conformity with relevant Union harmonization legislation.

Certified:

Authorized Representative:

Marcel Dutrieux
Manager European Product Integrity
Toro Europe NV
Nijverheidsstraat 5
2260 Oevel
Belgium

Engineering Director
1959 West Fir Avenue
Perry, OK 73077, USA

Date _____

UK Declaration of Conformity

The Charles Machine Works Inc., PO Box 66, 1959 West Fir Avenue, Perry, Oklahoma, USA, declares that the following unit(s):

Model	Serial Number	Description
XXXXX	XXXXXXXXXXXXXXXXXX	Compact Tool Carrier

Conform(s) to the following UK national laws:

S.I. 2008 No. 1597 (Machinery Safety) and S.I. 2016 No. 1091 (EMC).

Each model listed has been evaluated with the following standards and/or other normative documents:

EN 474-1:2022
EN ISO 13766-1:2018

The Technical Construction File is maintained at the manufacturer's location. The Authorized representative designated below is authorized to make the technical information available to the competent authorities of the Member States in response to a duly reasoned request.

This declaration has been issued under the sole responsibility of the manufacturer.
The object of the declaration is in conformity with relevant UK legislation.

Certified:

Authorized Representative:

Marcel Dutrieux
Manager European Product Integrity
Toro U.K. Limited
Spellbrook Lane West
Bishop's Stortford
CM23 4BU
United Kingdom

Engineering Director
1959 West Fir Avenue
Perry, OK 73077, USA

Date _____

Support

Registration

If your equipment was purchased through a Ditch Witch dealer, it is already registered. If you purchased from any other source, please email productsupportwarrantyadmin@ditchwitch.com or fill out the registration card located in the back of the parts manual. Registration enables you to receive updates on this equipment as well as information on new products of interest.

Procedure

Notify your dealer immediately of any malfunction or failure of Ditch Witch equipment.

Always give model, serial number, and approximate date of your equipment purchase. This information should be recorded and placed on file by the owner at the time of purchase.

Return damaged parts to dealer for inspection and warranty consideration if in warranty time frame.

Order genuine Ditch Witch replacement or repair parts from your authorized Ditch Witch dealer. Use of another manufacturer's parts may void warranty consideration.

Resources

Publications

Contact your Ditch Witch dealer for publications and videos covering safety, operation, maintenance, and repair of your equipment.

Ditch Witch Training

For information about on-site individualized training, contact your Ditch Witch dealer.

Warranty

Ditch Witch Equipment and Replacement Parts Limited Warranty Policy

Subject to the limitation and exclusions herein, free replacement parts will be provided at any authorized Ditch Witch dealership for any Ditch Witch equipment or parts manufactured by the Ditch Witch factory that fail due to a defect in material or workmanship within one (1) year of first commercial use. Free labor will be provided at any authorized Ditch Witch dealership for installation of parts under this warranty during the first year following "initial commercial" use of the serial-numbered Ditch Witch equipment on which it is installed. The customer is responsible for transporting their equipment to an authorized Ditch Witch dealership for all warranty work.

Exclusions from Product Warranty

- All incidental or consequential damages.
- All defects, damages, or injuries caused by misuse (including, but not limited to, rollover), abuse, improper installation, alteration, neglect, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All engines and engine accessories (these are covered by original manufacturer's warranty).
- Tires, belts, and other parts which may be subject to another manufacturer's warranty (such warranty will be available to purchaser).
- ALL IMPLIED WARRANTIES NOT EXPRESSLY STATED HEREIN, INCLUDING ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY.

IF THE PRODUCTS ARE PURCHASED FOR COMMERCIAL PURPOSES, AS DEFINED BY THE UNIFORM COMMERCIAL CODE, THEN THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF AND THERE ARE NO IMPLIED WARRANTIES OF ANY KIND WHICH EXTEND TO A COMMERCIAL BUYER. ALL OTHER PROVISIONS OF THIS LIMITED WARRANTY APPLY INCLUDING THE DUTIES IMPOSED.

Ditch Witch products have been tested to deliver acceptable performance in most conditions. This does not imply they will deliver acceptable performance in all conditions. Therefore, to assure suitability, products should be operated under anticipated working conditions prior to purchase.

Defects will be determined by an inspection within thirty (30) days of the date of failure of the product or part by Ditch Witch Product Support (DWPS) or its authorized dealer. DWPS will provide the location of its inspection facilities or its nearest authorized dealer upon inquiry. DWPS reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate.

Extended warranties are available upon request from your local Ditch Witch dealer or the Ditch Witch factory.

Some states do not allow exclusion or limitation of incidental or consequential damages, so above limitation of exclusion may not apply. Further, some states do not allow exclusion of or limitation of how long an implied warranty lasts, so the above limitation may not apply. This limited warranty gives product owner specific legal rights and the product owner may also have other rights which vary from state to state.

For information regarding this limited warranty, contact the DWPS department, P.O. Box 66, Perry, OK 73077-0066, or contact your local dealer.

Emissions Warranty Statement

Federal Emissions Control Warranty Statement
Your Warranty Rights and Obligations

Introduction

Emissions related parts and components of the engine are covered by the Emissions Warranty. Non-emissions related parts and components of the engine are covered by the terms and conditions of the equipment warranty. New equipment that use compression ignition engines must be designed, built, and equipped to meet stringent anti-smog standards. The Charles Machine Works, Inc. must warrant the emissions control system on your equipment for the period listed below provided there has been no abuse, neglect, or improper maintenance of your equipment leading to the failure of the emissions control system.

Your emissions control system may include parts such as: aftertreatment equipment, aftertreatment equipment mounting, DEF lines, DEF tanks, DEF pump, air induction system and other associated emission-related components.

Manufacturer's Warranty Coverage

This emissions control system is warranted for a number of years depending on the power class and speed rating, see table below. If any emission-related part on your equipment is defective, the part will be repaired or replaced by The Charles Machine Works, Inc.

Owner's Warranty Responsibilities

As the equipment owner, you are responsible for performance of the required maintenance listed in your operator's manual. The Charles Machine Works, Inc. recommends that you retain all receipts covering maintenance on your equipment, but The Charles Machine Works, Inc. cannot deny warranty solely for the lack of receipts.

As the equipment owner, you should be aware that The Charles Machine Works, Inc. may deny you warranty coverage if your equipment or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications.

You are responsible for presenting your equipment to a Ditch Witch® service center as soon as the problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days. If you have a question regarding your warranty coverage, you should contact your local Ditch Witch Dealer or The Charles Machine Works, Inc. at 1-800-433-6652.

General Emissions Warranty Coverage

The Charles Machine Works, Inc. warrants to the ultimate purchaser and each subsequent purchaser that the equipment is:

- Designed, built, and certified to conform with all applicable emissions regulations, and
- Identical in all material respects to the parts as describe in the application for certification, and
- Free from defects in materials and workmanship that could cause the failure of a warranted part.

The warranty period begins on the date the equipment is delivered to an ultimate purchaser. The warranted period is a number of years depending on power and speed rating.

If engine is certified as	And its maximum power is	And its rated speed is	Then it's warranty period is
Variable speed or constant speed	kW < 19 hp < 25	Any speed	1500 hours or two years, whichever comes first
Constant speed	$19 \leq \text{kW} < 37$ $25 \leq \text{hp} < 49$	3000 rpm or higher	1500 hours or two years, whichever comes first
Constant speed	$19 \leq \text{kW} < 37$ $25 \leq \text{hp} < 49$	Less than 3000 rpm	3000 hours or five years, whichever comes first
Variable speed	$19 \leq \text{kW} < 37$ $25 \leq \text{hp} < 499$	Any speed	3000 hours or five years, whichever comes first
Variable speed or constant speed	kW ≥ 37 hp ≥ 49	Any speed	3000 hours or five years, whichever comes first

Subject to certain conditions and exclusions as stated below, the warranty on emission-related parts is as follows:

1. Any warranted part that is not scheduled for replacement as required maintenance in the written instructions supplied, is warranted for the warranty period stated above. If the part fails during the period of warranty coverage, the part will be repaired or replaced by The Charles Machine Works, Inc. Any such part repaired or replaced under warranty will be warranted for the remainder of the warranty period.
2. Any warranted part that is scheduled only for regular inspection in the written instructions supplied is warranted for the warranty period stated above. Any such part repaired or replaced under the warranty will not reduce the period of warranty coverage and will be warranted for the remainder of the warranty period.
3. Any warranted part that is scheduled for replacement as required maintenance in the written instructions supplied is warranted for the period of time prior to the first scheduled replacement date for that part. If the part fails before the first scheduled replacement, the part must be repaired or replaced by The Charles Machine Works, Inc. Any such part repaired or replaced under warranty will be warranted for the remainder of the period up to the first scheduled replacement point for the part.
4. Repair or replacement of any warranted part under the warranty provisions herein must be performed at an Authorized Service Dealer at no charge to the owner.
5. Warranty services or repairs will be provided at all Service Dealers authorized to service the subject equipment.
6. The equipment owner will not be charged for diagnostic labor that is directly associated with diagnosis of a defective, emission-related warranted part, provided that such diagnostic work is performed by an Authorized Service Dealer.
7. The Charles Machine Works, Inc. is liable for damages to other engine or equipment components proximately caused by a failure under warranty of any warranted part.
8. Throughout the emissions control system's warranty period stated above, The Charles Machine Works, Inc. will maintain a supply of warranted parts sufficient to meet the expected demand for such parts.
9. Manufacturer approved replacement parts may be used in the performance of any warranty maintenance or repairs and must be provided without charge to the owner. Such use will not reduce the warranty obligations of The Charles Machine Works, Inc.
10. Add-on or modified parts that are not approved by The Charles Machine Works, Inc. will not be liable to warrant failures of warranted parts caused by the use of non-approved, add-on, or modified parts.

Warranted Parts

The repair or replacement of any warranted part otherwise eligible for warranty coverage may be excluded from such coverage if The Charles Machine Works, Inc. demonstrates that the equipment has been abused, neglected, or improperly maintained, and that such abuse, neglect, or improper maintenance was the direct cause of the need for repair or replacement of the part. That notwithstanding, any adjustment of a component that has a factory installed, and properly operating, adjust limiting device is still eligible for warranty coverage. The following emissions warranty parts list are covered.

- aftertreatment equipment
- DEF tank
- DEF pump
- electronic controls
- fuel lines when connected to exhaust aftertreatment equipment
- fuel line clamps when connected to exhaust aftertreatment equipment
- air filter
- aftertreatment equipment mounting brackets
- DEF hoses
- DEF filter
- air filter hoses and connections

